1/2" (13mm) and 3/4" (19mm) Rough Valves, All Series

1/2" - Model D35000710.191 3/4" - Model D35000700.191

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.





S

ш

 α

 α

0


Ш

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.



ROUGHING-IN DIMENSIONS: • For reference 1/2" OR 3/4" NPT OUTLET FINISHED WALL WALL OPENING 1/2" (13 mm) VALVE 2-3/8" (60 mm) 3/4" (19 mm) VALVE 3" (76 mm) 1-1/2" MAX (28 mm)-(76 mm) DIRECTIONAL **ARROW** 1/2" OR 3/4" NPT (13 mm) VALVÉ 1" MIN. (25 mm) **REM** 1/2" (13 mm) & 3/4" (19 mm) WALL VALVE 1-5/8" MIN. (41 mm) 3/4" (19 mm) VAI VÉ 1/2" (13 mm) VALVE 1-1/8" MIN. 1-3/4" (44 mm) MAX. **REM** 1/2" (13 mm) & 3/4" (19 mm) 3/4" (25 mm) VALVE WALL VALVE 2-3/8" MAX. (60 mm) 1-7/8" (48 mm) MAX.

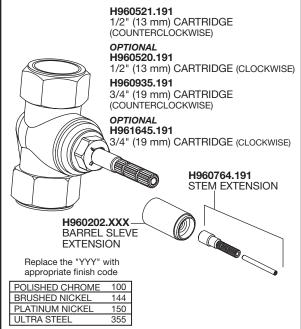

1 ROUGHING-IN THE VALVE

CAUTION

Turn off hot and cold water supplies before beginning.

- Determine where the finished wall location will be. This measurement is very important! **NOTE:** Rough wall to center of the supply inlet is the same for all series (except REM) as noted above, leaving a 3/4" tolerance. For the REM valves, the rough wall to center of the supply inlet is: 1-5/8" (41 mm) minimum to 2-3/8" (60 mm) maximum, leaving a 3/4" (19 mm) tolerance.
- Please note the directional arrow on the valve body. This is the direction the water must flow. Make sure the inlet and outlet sides are piped correctly! Do not solder the pipe adapters to wall valve. Use pipe adapters with proper pipe joint compound.
- When installation is complete, turn water supply on and check for proper operation and for leaks prior to the installation of the finished wall.

In the United States:

DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

PART OF LIXIL