


INSTALLATION INSTRUCTIONS

Isle® Single Lever Pull-Down Kitchen Faucet Model D35409300

 
Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

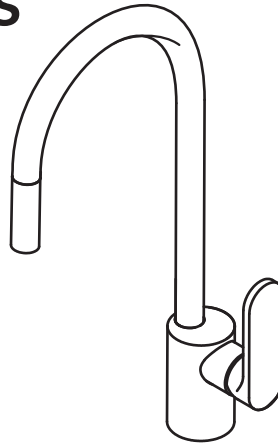

DXV

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.



Adjustable Wrench




Channel Locks



Flat Blade Screwdriver

ROUGHING-IN DIMENSIONS:

- For reference

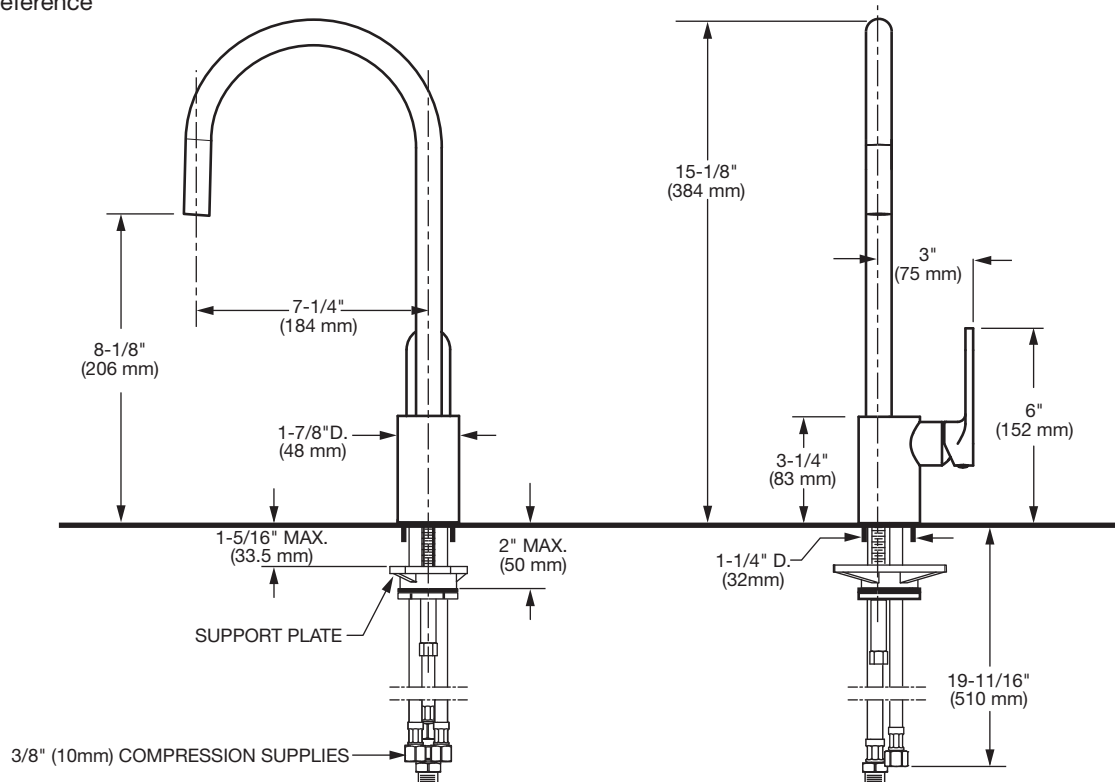

In the United States:

DXV
One Centennial Avenue
Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734
www.DXV.com

In Canada:

DXV
5900 Avebury Road
Mississauga, Ontario
L5R 3M3
Canada

Toll Free: 1-800-387-0369
Local: 905-306-1093
Fax: 1-800-395-1498
www.DXV.ca

In Mexico:

DXV
Via Morelos 330
Col. Santa Clara Coatitla
Ecatepec, Estado de México 55540



Toll Free: 01-800-8391200
www.DXV.mx

SAVE FOR FUTURE USE

1 INSTALL FAUCET

CAUTION Turn off hot and cold water supplies before beginning.

- Make certain the SEAL (1) is properly seated in recess of faucet body. Insert SUPPLY HOSES (2), SPRAY HOSE (3) and MOUNTING STUD (4) through mounting hole and seat faucet onto sink or mounting surface. Do not use putty. **Fig. A.**
- From below install SUPPORT PLATE (5) GASKET with RETAINING WASHER (6) onto MOUNTING STUD (7). Install MOUNTING NUT (8) onto MOUNTING STUD (7). **Fig. B.**
- Adjust Faucet so that it is centered. Tighten MOUNTING NUT (8) to complete faucet mounting. **Fig. B.**

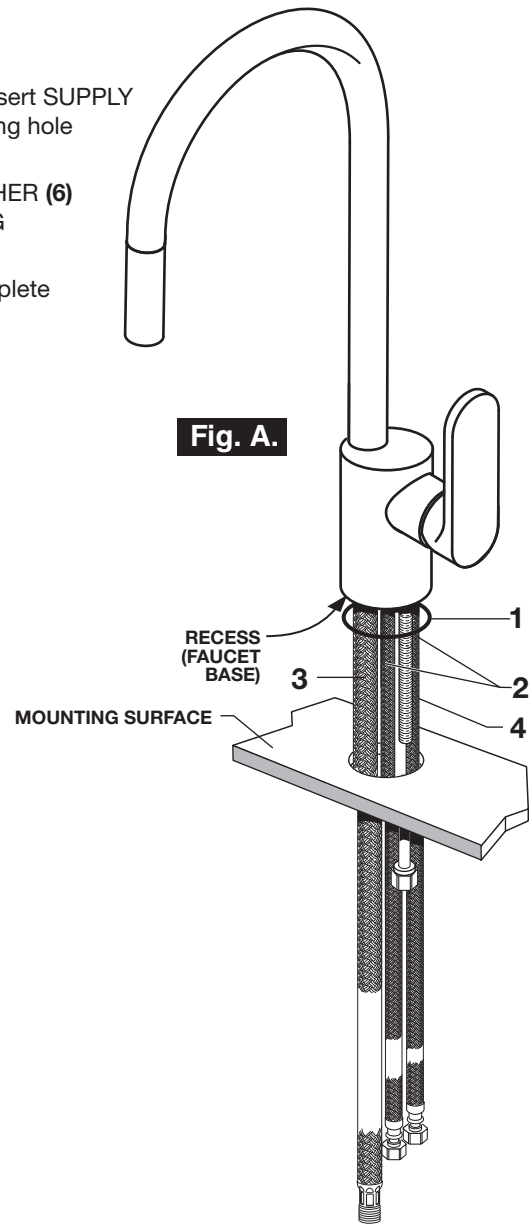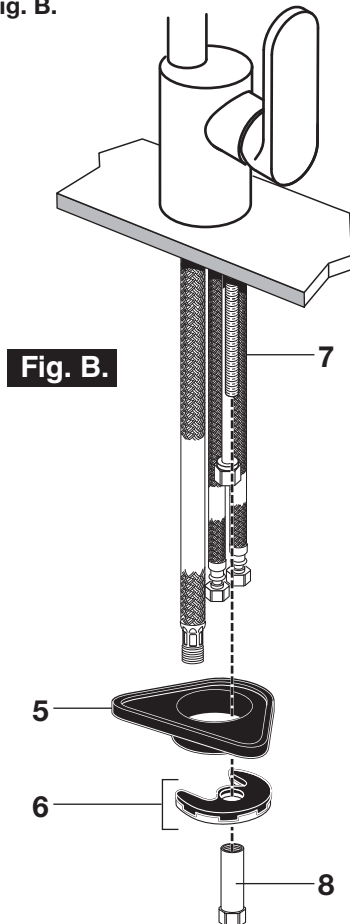


2 MAKE WATER SUPPLY CONNECTIONS

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" (8 mm) compression. Connect left SUPPLY (1) to Hot (Marked with a Red Stripe) and right supply to COLD (2) wall supply (Marked with a Blue Stripe). Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 20" (508 mm) long from faucet base.


Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

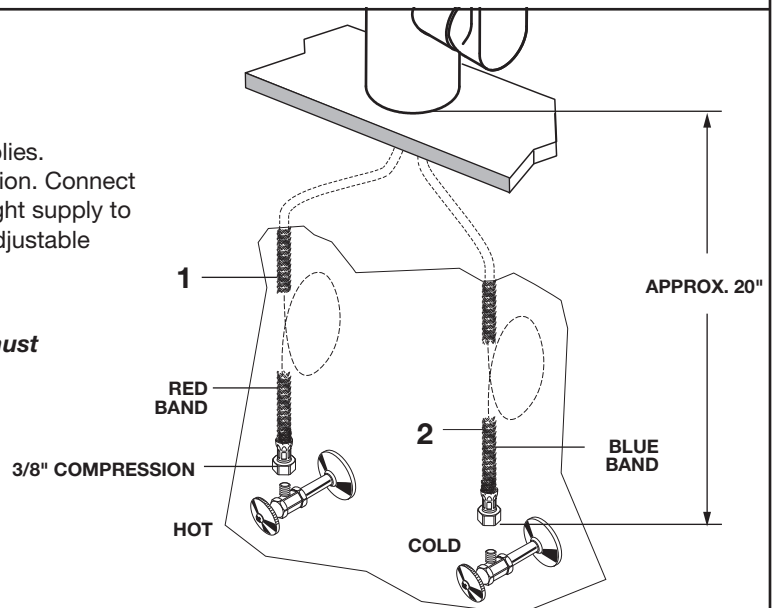


3 CONNECT SPRAY HOSE & INSTALL WEIGHTS

- Push the SPRAY HOSE END (1) into the HOSE COUPLING NUT (2). Tighten COUPLING NUT.
- With SPRAY (3) seated in SPOUT (4), install WEIGHT (5) onto HOSE (6) 18" (457 mm) from the underside of the sink deck and secure with SCREW (7).

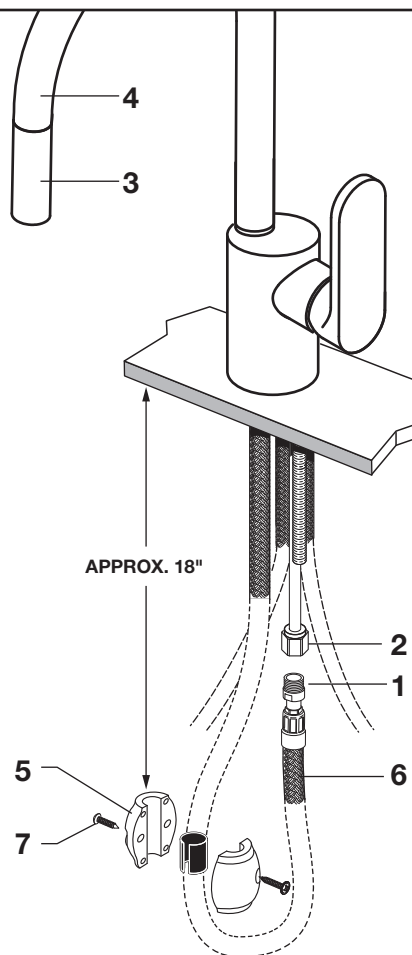


4 CHECK CONNECTIONS FOR LEAKS

- Move HANDLE (1) into "off" position.
- Remove AERATOR (2) and clean if necessary.
- Turn on water supplies and check connections for leaks. ➡
- Operate HANDLE and check for leaks. ➡
- Tighten coupling nuts if needed.

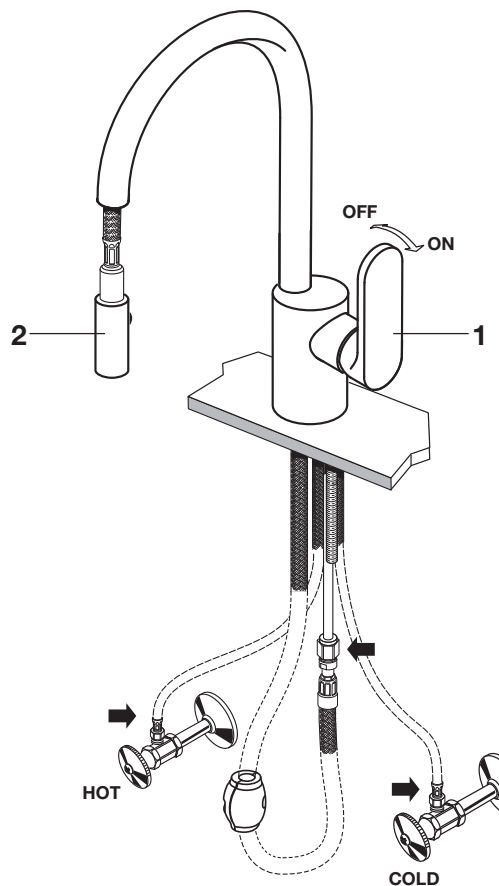


5 TEST INSTALLED FAUCET

- Move HANDLE (1) into “off” position.
- Turn on water supplies.
- With HANDLE (1) in “off” position, unthread AERATOR (2) from SPRAY (3) using KEY (4) supplied with faucet.
- Operate handle back to front, in COLD and HOT positions, to flush water lines thoroughly.
- Replace AERATOR (2).

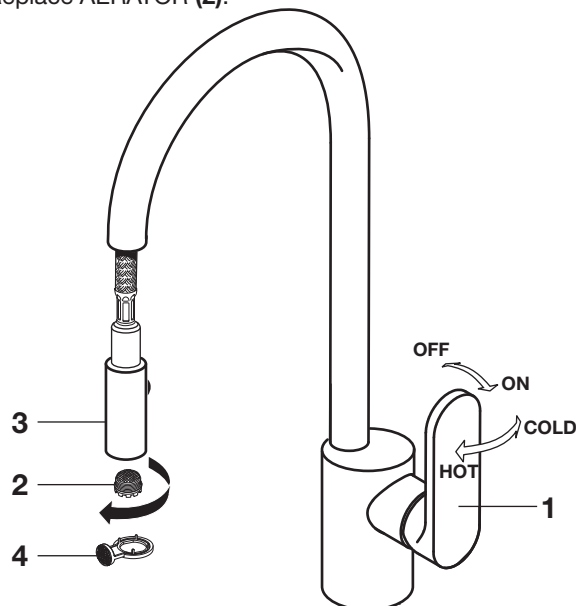

SPRAY OPERATION


- With FAUCET on, pull down SPRAY (3). Check for leaks. Make sure SPRAY (3) fully retracts and is seated in the SPOUT HOLDER (5).
- Slide BUTTON (6) down for spray mode. Do not need to hold button down. Spray function will remain active until user slides BUTTON (6) up for aerated ow mode, or until water is shut off and turned back on again.

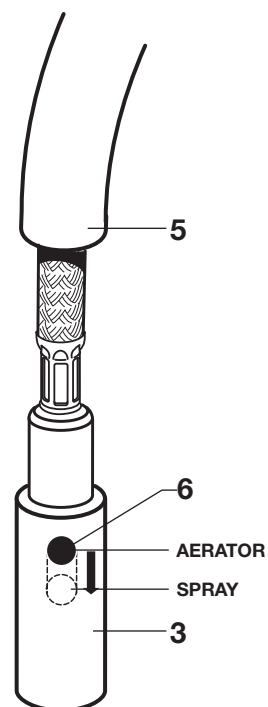

6 SERVICE

Clogged CARTRIDGE outlets or inlets may cause reduced flow. To clean, first turn off water supply then:

- Pull out INDEX BUTTON (1). Loosen HANDLE SCREW (2) with 2.5 mm Hex Wrench, then pull HANDLE (3) off.
- Unthread CARTRIDGE COVER (4) with CARTRIDGE RING NUT KEY (7) supplied with faucet.
- Remove CARTRIDGE (5). Clean inlets of CARTRIDGE (5) and MANIFOLD (6).
- Reassemble CARTRIDGE (5). Replace CARTRIDGE COVER (4) and HANDLE (3) assembly, check flow.
- AERATOR (8) may accumulate dirt causing distorted and reduced water flow. Remove AERATOR (8) with KEY (9) and rinse clean and replace.

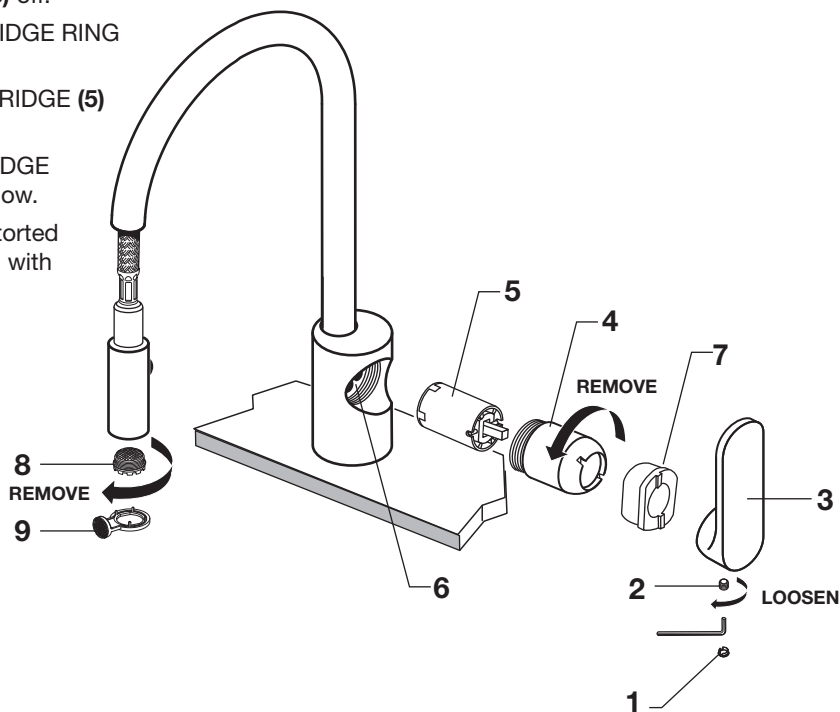

DXV

Isle® Single Control Pull-Down Kitchen Faucet

MODEL NUMBER

D35409300

Replace the “YYY” with
appropriate finish code

POLISHED CHROME	100
ULTRA STEEL	355

M964780-YYY0A
SPRAY AND HOSE ASSEMBLY

M964779-0070A
AERATOR KEY

M964781-0070A
O-RINGS

M964791-0070A
SPOUT SET SCREW

M964784-0070A
CARTRIDGE

M964508-0070A
CARTRIDGE COVER
NUT KEY

M964825-0070A
SEAL

M964783-YYY0A
CARTRIDGE
COVER

M964782-YYY0A
HANDLE KIT

M964786-0070A
HOSE WEIGHTS

M921935-0070A
ADAPTOR

M964788-0070A
CHECK VALVE

M964827-0070A
SUPPORT PLATE

M964777-0070A
MOUNTING KIT