
DWV

Randall® Exposed Tub Filler with Hand Shower

Cross Handle Model D3510298C

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

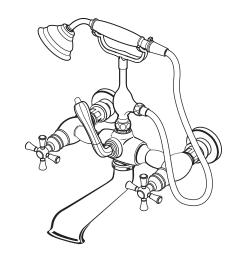



 α

0

 
Ш

⋖

ഗ


RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.



ROUGHING-IN DIMENSIONS:

• For reference

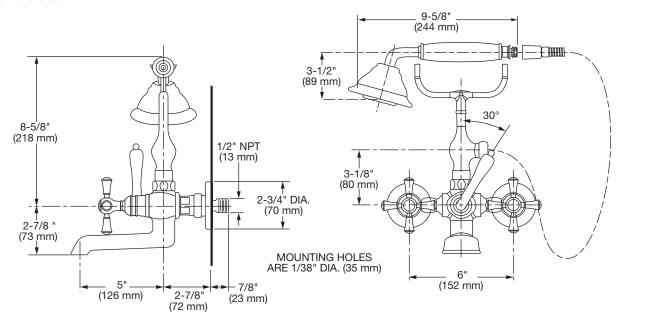

In the United States:

 DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

INSTALL ROUGH PIPING

CAUTION Turn off hot and cold water supplies before beginning.

IMPORTANT NOTICE TO THE INSTALLER!

C/L

6"

(152 mm)

2

Please check with your local Code Authority for acceptable installation requirements for this Roman Tub set with hand shower. Some local codes may require a vacuum breaker and/or a pressure balanced mixing valve to be installed in conjunction with this product.

C/L

1/2" NPT

(13 mm)


CROSS BRACE


Figure C.

• Determine where the finished wall location will be. This measurement is very important!


Note: The rough-in measurement from the finished wall to the end of the off-set nipple is 1-5/8" (41mm). See rough-in illustration below. Figure A.

- The C/L of the supplies are 6", ±1/2". Figure B.
- Install a cross brace between the wall studs.
- Apply thread sealant or Teflon Tape to threads of Hot and Cold supplies connections. Assemble 1/2" (13 mm) NPT SUPPLIES at 6" (152 mm) from center to center. Thread ECCENTRICS (1) into roughed-in 1/2" SUPPLY COUPLINGS (2). Center to center dimension of ECCENTRICS (1) is 6" (152 mm). Figure C.
- · Finish all wall construction.

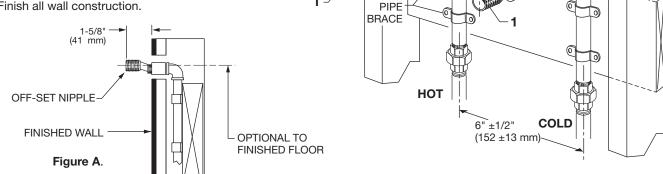

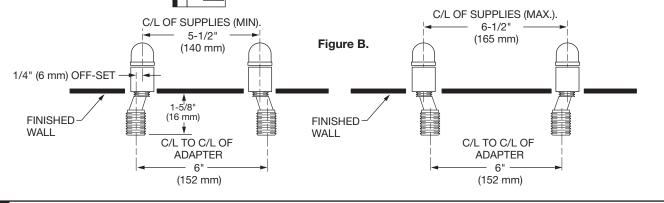


INSTALL ESCUTCHEONS

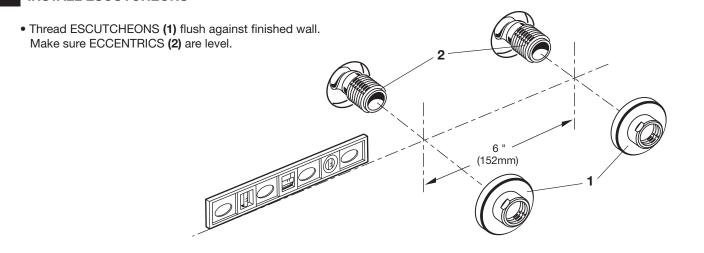

3 INSTALL FAUCET

- Install SEAL WASHERS (1) into COUPLING NUTS (2).
- Thread COUPLING NUTS (2) onto ECCENTRICS (3) and tighten.

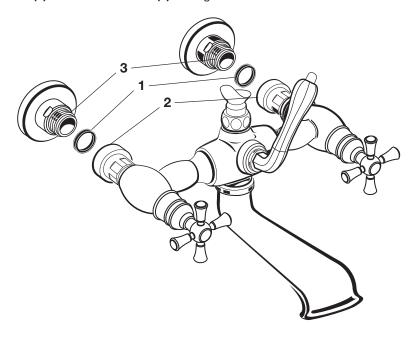


4 CONNECT HOSE AND SPRAY

- Install SEAL WASHER (1) and connect smaller end of HOSE (2) to Outlet Nipple on side of BRACKET (3).
- Install SEAL WASHER (4) to conical end of HOSE (5) and attach HAND SPRAY (6).
- Fully tighten both connections.

5 TEST INSTALLED FAUCET

The flow rate of this Tub Filler exceeds 20 gallons/minute at higher water pressure. Do not fill bathtub unattended.

- Turn VALVES to "off" position.
- With handles in "off" position, turn on water supplies and check all connections for leaks.
- Remove HAND SHOWER (7) and operate both handles to flush lines.
- Lift HAND SHOWER (7) from BRACKET (8) and direct spray into tub. Remove HAND SHOWER (7) from HOSE (5).
 Turn DIVERTER LEVER (9) to SHOWER and check all connections for leaks. Replace HAND SHOWER (7) onto HOSE (5).

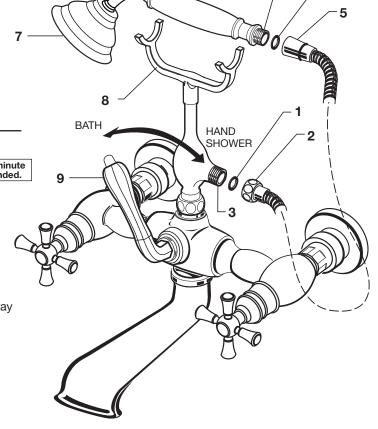



Randall[®] Exposed Tub Filler with Hand Shower

MODEL NUMBER

D3510298C

