# American Standard

## **PRINCETON®**

Spread Lavatory Faucet with Speed Connect® Drain Installation Instructions 4508.801



Certified to comply with ANSI A112.18.1


M968832 Rev.1.8 (5/18)

Congratulations on purchasing your American Standard faucet with Speed Connect drain, a feature found only on American Standard faucets.

### Speed Connect® Drain\*


- Fewer parts, installs in less time
- Never needs adjustment
- Guaranteed to seal properly the first time, every time.


To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

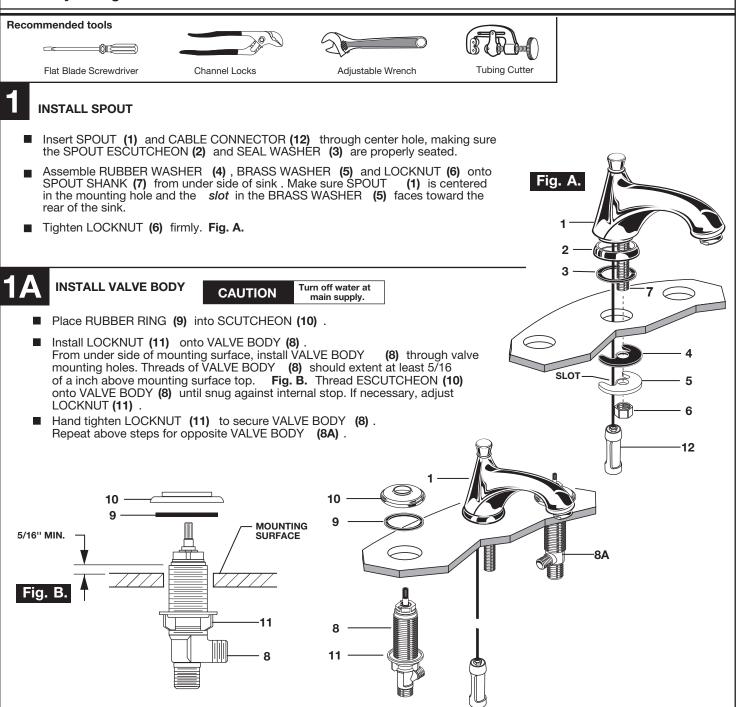

## POP-UP DRAIN


- Remove CLEAR PLASTIC COVER (1).
- Remove CARDBOARD SPACER (2) from under DRAIN POP-UP (3).
- Tighten TAILPIECE (4) on DRAIN BODY before installing DRAIN BODY. Fig. B.

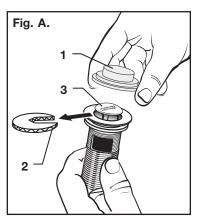


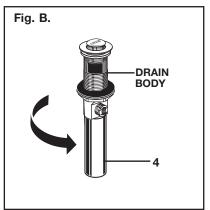

## REMOVE FLANGE

- Thread FLANGE (1) counter-clockwise and remove FLANGE (1) and FOAM GASKET (2) from drain body. Fig. A.
- Thread LOCKNUT (3) clock-wise to bottom of drain body. Push GASKET (4) down against LOCKNUT (3). Fig. B.

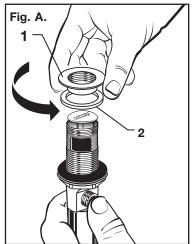

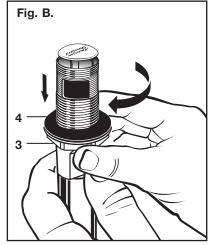


# 4 INSTALL DRAIN FROM BELOW FIXTURE

From under side of SINK install DRAIN BODY (1) up through drain outlet.


**Note:** No plumber's putty or caulk is required. The CABLE ATTACHMENT POINT(2) must face towards the rear of the SINK.

Install FOAM GASKET (3) and FLANGE (4) onto drain body from above SINK and tighten FLANGE (4) firmly.

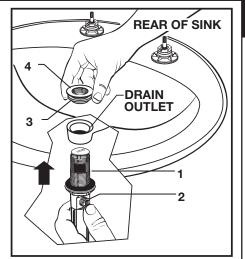


# 5 TIGHTEN LOCKNUT


■ Tighten LOCKNUT (1) firmly with Adjustable Wrench or Channel Locks.

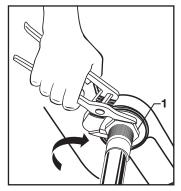

## FLANGE GASKET AND POP-UP KNOB

- Check DRAIN FLANGE in SINK to ensure that WHITE FOAM GASKET (3) is fully compressed and not visible. Fig. A.
- POP-UP KNOB (1) must be fully down. Fig. B.

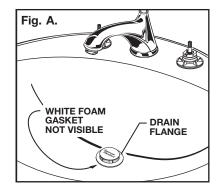

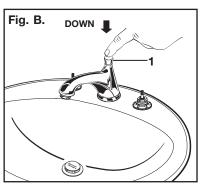


# 7

#### ATTACH CABLE CONNECTOR

Thread CABLE CONNECTOR (1) clockwise onto DRAIN BODY CONNECTION (2) and hand tighten. Fig. A.

Your new POP-UP DRAIN installation is now complete. **Fig. B.** 

**Note:** Tailpeice on pop-up drain is 1-1/4" O.D. **Fig. B.** 

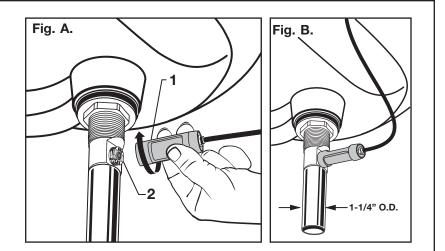


# 8

#### **CHECK OPERATION OF POP-UP**

 Operate LIFT KNOB (1) to verify that STOPPER (2) opens and closes.

**Note:** If STOPPER **(2)** does not open and close properly then refer to the "troubleshooting section" of these instructions.

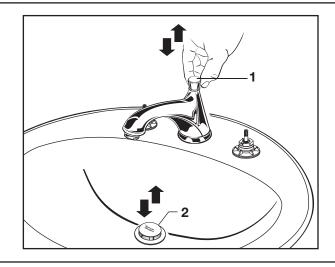

## 9

#### MAKE WATER SUPPLY AND WASTE CONNECTIONS

NOTE: FLEXIBLE SUPPLIES OR BULL-NOSE RISERS NOT INCLUDED AND MUST BE PURCHASED SEPARATELY.


■ Thread TEE BODY (4) to SPOUT SHANK (5).

■ Thread HOSE CONNECTOR (6, 6A) to VALVE CONNECTIONS (7, 7A) .

■ Connect water supply to VALVE BODIES (1,1A) with 1/2" IPS FLEXIBLE SUPPLIES (2) or 3/8" O.D. BULL-NOSE RISERS (3). Use adjustable wrench to tighten connections. Do not over tighten. Be careful not to kink copper supply when bending. Use tubing cutter to cut to proper length.

■ Connect HOT water supply to inlet of left SHANK and COLD water supply to right SHANK using sealant, appropriate connectors, and COUPLING NUTS.


 Connect 1-1/4" O.D. tailpiece on POP-UP DRAIN to waste outlet.

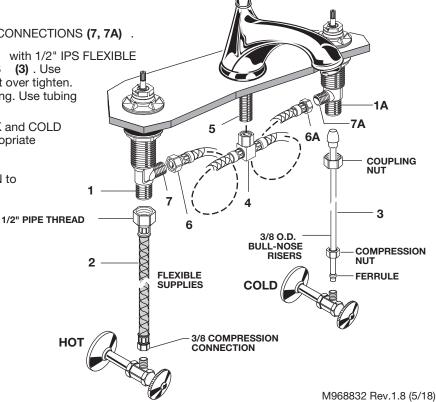



- Push ADAPTER (1) on VALVE STEM (2), so that the hole of the ADAPTER (1) without a spline is facing up. See figure "A". Tighten STEM SCREW (3) to secure ADAPTER (1).
- Find correct position of LEVER HANDLE ASSEMBLY (4) by adjusting male teeth on ADAPTER (1) to female teeth in HANDLE (4).
- Thread LEVER HANDLE ASSEMBLY (4) onto DECK ADAPTER (5) until snug against mounting surface . .

**SPLINE END DOWN** 

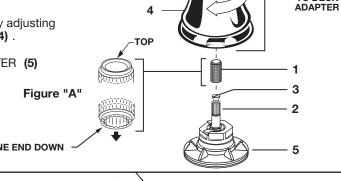


### **TEST INSTALLED FITTING**

- With HANDLES (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3).

### **CHECK DRAIN CONNECTIONS**

- Operate POP-UP KNOB (5) and fill Sink with water. Check that DRAIN STOPPER (4) makes a good seal and retains water in Sink. If STOPPER (4) does not seal properly, please refer to "Troubleshooting Guide" in these instructions.
- Release POP-UP KNOB (5) down and check all drain connections and "P" trap for leaks. if necessary.

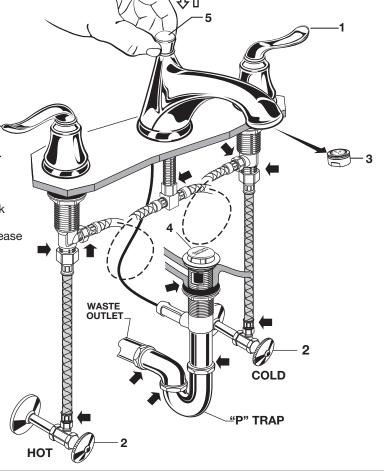

#### **CARE INSTRUCTIONS:**


DO: CLEAN WITH CLEAR WATER. **DRY WITH A SOFT COTTON** FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID. POLISH, ABRASIVES, HARSH **CLEANERS, OR A CLOTH WITH** A COARSE SURFACE.

#### **SERVICE**


- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position. Unthread HANDLE BASE (1) from DECK ADAPTER (2)
  - Pull HANDLE ASSEMBLY off VALVE STEM (3)
  - Remove SPRING CLIP (4) . Lift STOP WASHER (5) , turn 90° and replace. Replace SPRING CLIP
  - Find correct position of HANDLE ASSEMBLY by adjusting male teeth on VALVE STEM (3) to female teeth in HANDLE.

    Thread HANDLE ASSEMBLY onto DECK ADAPTER (2)
  - until snug against mounting surface.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

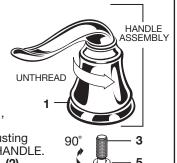

THREAD ON

 TO DECK



M968832 Rev.1.8 (5/18)

### **Speed Connect® Drain Troubleshooting Guide**

If sink does not hold water even though Stopper is in the "down" position:

Follow CABLE ADJUSTMENT PROCEDURE.

If Stopper does not raise up fully or sink drains too slowly:
• Follow CABLE ADJUSTMENT PROCEDURE.

If you need to remove the Stopper:


Follow STOPPER REMOVAL PROCEDURE.

If you would like the ability to remove your Stopper simply by lifting it out of the drain:

Follow STOPPER INSTALLATION PROCEDURE for "Unlocked" mode.


#### **CABLE ADJUSTMENT PROCEDURE**


- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. Fig. B.
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. Fig. B, C.
- Push DOWN on the Lift-Knob to make sure it is fully down.
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.

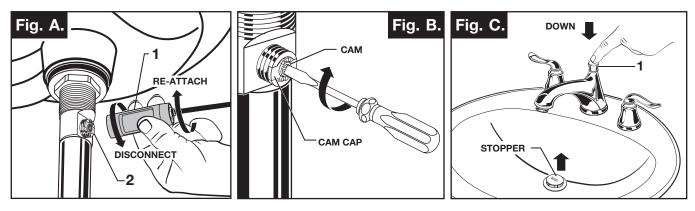

#### STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. Fig. D.
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Stopper can now be removed by lifting it out of the Drain. Fig. F.

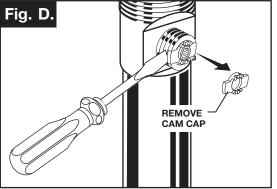

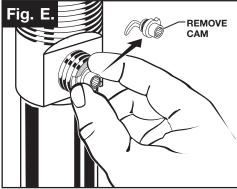




M968832 Rev.1.8 (5/18)

#### STOPPER INSTALLATION PROCEDURE

The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).

#### **Locked Mode:**

- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. Fig. G.
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink and the American Standard logo is facing front. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted.
   Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.

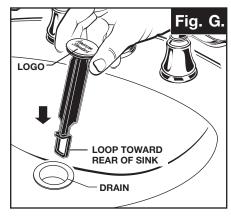


Locked Mode (Vandal Proof)


#### **Unlocked Mode:**


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. Fig. H.
- To install the stopper in "Unlocked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the front of the Sink and the American Standard logo is facing rear. Rotate Stopper slightly if necessary so that the Stopper slides all the way down.


  Fig. H.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted.
   Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted.
  Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.

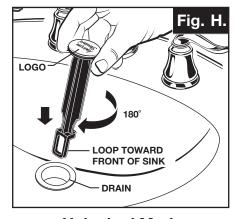

**Unlocked Mode** 

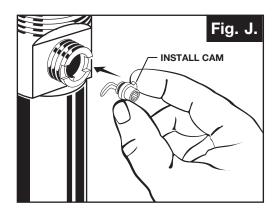

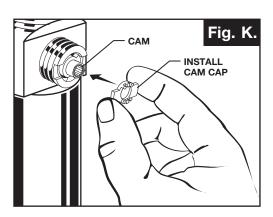

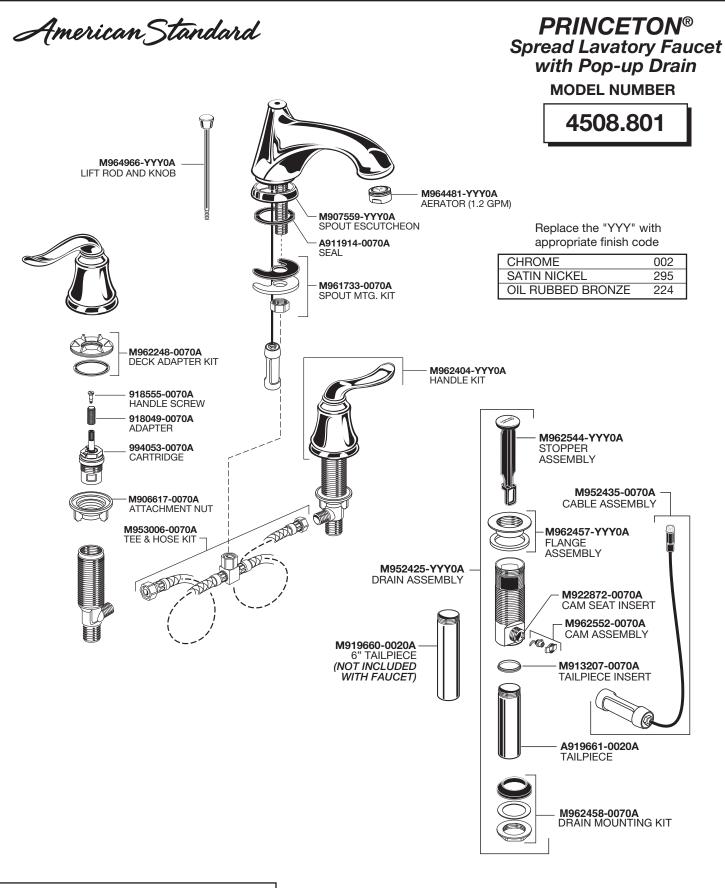

#### HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)

(TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200



Product names listed herein are trademarks of AS America, Inc. © AS America, Inc. 2018

PART OF LIXIL

M968832 Rev.1.8 (5/18)