


**HERITAGE**  
AMARILIS

**HERITAGE SERIES  
SPREAD LAVATORY  
FAUCETS**

Thank you for selecting American-Standard...  
the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--  
please read these instructions carefully before you begin.


Installation  
Instructions  
4800.372H  
7830.372H  
7890.372H

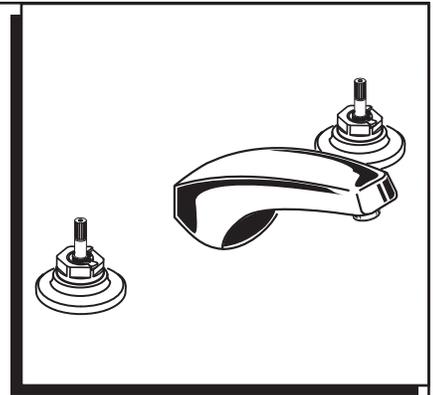


Certified to comply with ANSI A112.18.1M  
U.S. Patent No. 5,819,789

34312 Rev. 1.3 (4/16)



**4800 SERIES**  
CONVENTIONAL  
SPOUT LESS POP-UP

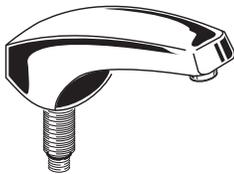

**7830 SERIES**  
GOOSENECK SPOUT  
WITH POP-UP

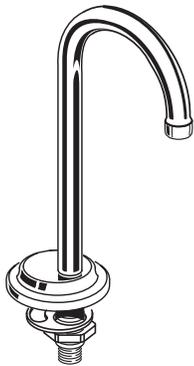

**7890 SERIES**  
GOOSENECK SPOUT  
BAR SINK

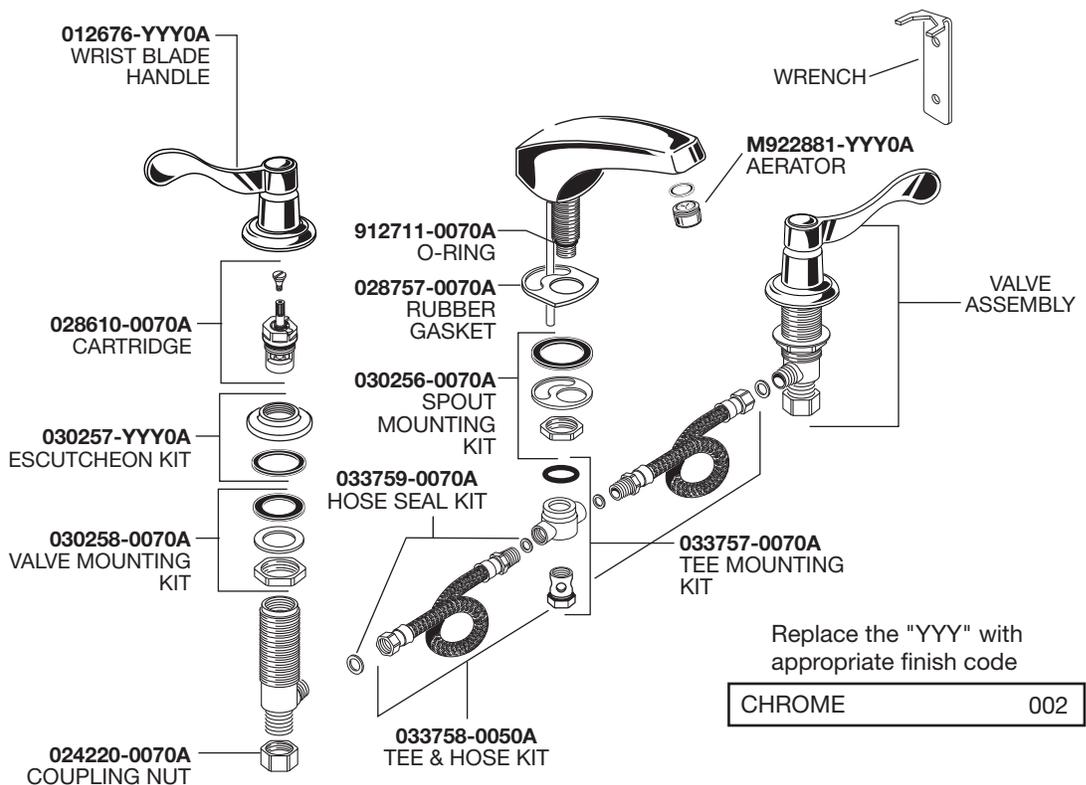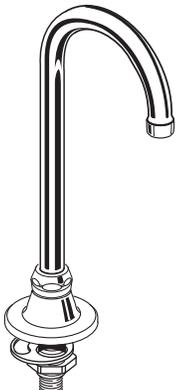


**1**

**CAUTION**

Turn off water at  
main supply.

**SPOUT ASSEMBLY (Model 7890 only)**


- Apply the grease (provided) liberally to the SPOUT O-RINGS and SNAP RING areas.
- Assemble the SPOUT and tighten SPOUT NUT until snug on VALVE BODY.
- Tighten BRASS LOCKNUT on center body.

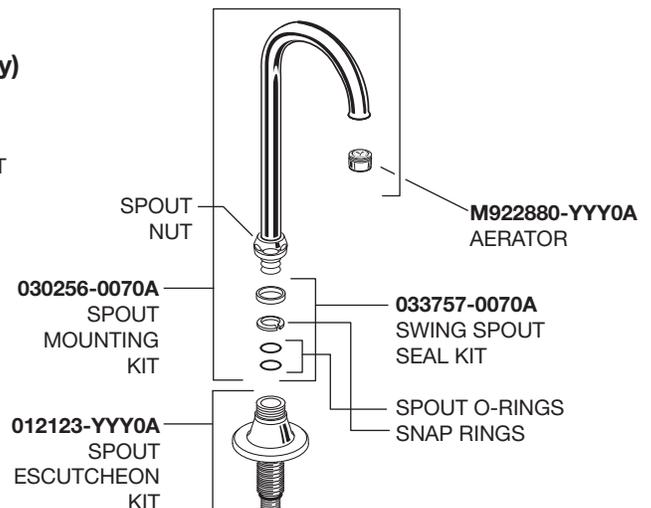

# 1

## SPOUT OR BASE ASSEMBLY (continued)


- Insert BASE or SPOUT shank through center hole of SINK, making sure RUBBER GASKET is properly positioned.
- Assemble RUBBER WASHER, RETAINER, and LOCKNUT onto threads of SPOUT from underside of SINK.
- Insert LIFT ROD through SPOUT (or BASE) and slot of RETAINER.
- Align SPOUT and tighten LOCKNUT. Be sure slot in BRASS WASHER is positioned to the rear as shown.
- Push SCREW into TEE and tighten SCREW onto SHANK to secure SPOUT connection.
- Place WASHERS inside COUPLING NUTS and connect HOSE to each valve outlet. Tighten COUPLING NUTS.
- Connect HOT water supply to the left VALVE and the COLD water to the right VALVE using sealant and appropriate connectors and coupling nuts.
- Refer to separate "Instruction Sheet" for assembly of handles.

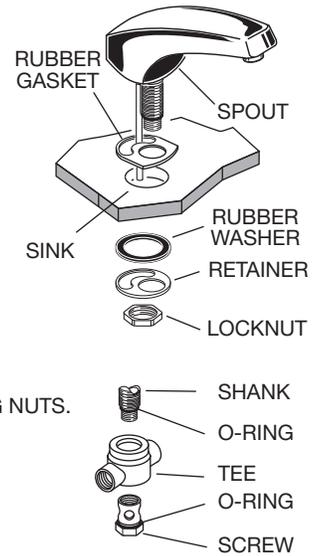

# 2

## VALVE INSTALLATION

- Insert VALVE BODY through hole from underside of SINK. Thread of VALVE BODY should extend at least 5/16 inch above SINK top. If necessary, adjust LOCKNUT.
- Place RUBBER RING into ESCUTCHEON and screw ESCUTCHEON onto VALVE BODY until snug against internal stop.
- Set VALVE BODIES so that their outlets are facing toward center of SINK. Tighten LOCKNUT using wrench supplied with faucet.
- Before connecting TEE make certain that O-RINGS are properly seated on stepped SHANK and SCREW.

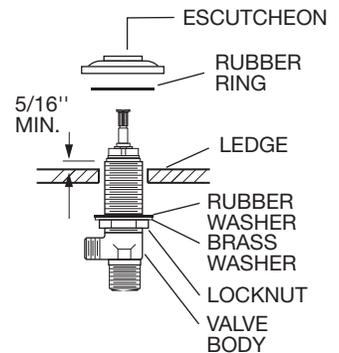

# 3


## TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Turn handles into OFF position and replace AERATOR.


# 4

## SERVICE

- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position.
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Remove SPRING CLIP.
  - Lift STOP WASHER, turn 90° and replace.
  - Replace SPRING CLIP.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

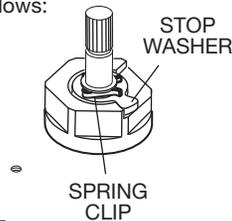

- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Unscrew CARTRIDGE with wrench.
  - Thoroughly rinse plastic SCREEN a base of CARTRIDGE.
  - Replace CARTRIDGE until flange is tight against valve body.
  - Turn valves OFF.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.

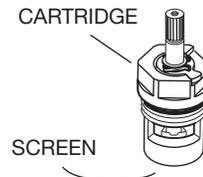

### HOT LINE FOR HELP

For toll-free information and answers to your questions, call:  
 1 (800) 442-1902  
 Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST  
 Saturday 10:00 a.m. to 4:00 p.m. EST  
 IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)  
 Weekdays 8:00 a.m. to 7:00 p.m. EST  
 IN MEXICO 01-800-839-1200



Product names listed herein are trademarks of AS America, Inc. ©2016

PART OF LIXIL