



PARTS LIST

NOTE: "XXX" represents color options.
Specify when ordering.

COMPONENT	DESCRIPTION	St. George®	Wyatt®	Cossu™
		1.28 GPF	1.28 GPF	1.28 GPF
735193-400.XXX	Tank Cover, St. George	✓		
5004A-10G.XXX	Traditional Elongated Seat, St. George	✓		
7381073-XXX0A	Bolt Cap Kit	✓	✓	✓
738835-XXX0A	Trip Lever, St. George	✓		
7381125-400.0070A	Universal Inlet Valve	✓	✓	✓
738942-104.0070A	Flush Valve Assembly with Flapper	✓	✓	
7381043-402.0070A	Flapper Assembly	✓	✓	✓
735194-400.XXX	Tank Cover, Wyatt		✓	
7381331-200-XXX0A	Left-Hand Trip Lever, Wyatt		✓	
7381847-200-XXX0A	Right-Hand Trip Lever, Wyatt		✓	
5006A-10G.XXX	Transitional Elongated Seat, Wyatt		✓	
735192-400.XXX	Tank Cover, Cossu			✓
5011A-10G.XXX	Contemporary Elongated Seat, Cossu			✓
7381345-200-XXX0A	Left-Hand Trip Lever, Cossu			✓
7381846-200-XXX0A	Right-Hand Trip Lever, Cossu			✓
738942-106.0070A	Flush Valve Assembly with Flapper			✓

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Does not flush	a. Water supply valve closed.	a. Open valve and allow water to fill tank.
	b. Water supply line blocked.	b. Shut off water supply, disconnect supply line and inspect all gaskets and washers. Reassemble. Also, see Fluidmaster maintenance. (see Step 11)
	c. Flush valve chain too loose or disconnected.	c. Readjust chain length as required.
	d. Sand or debris lodged in water control.	d. Also, see Fluidmaster maintenance. (see Step 11)
Poor or sluggish flush	a. Bowl water level too low.	a. Check that refill tube is connected to water control and inserted into tank overflow without being kinked or damaged.
	b. Supply valve partly closed.	b. Open supply valve fully. Be sure that proper supply tube size is used.
	c. Partially clogged trapway and/or drain pipe and/or vent.	c. Remove obstruction. Consult a plumber if necessary.
	d. Supply pressure too low.	d. Normal supply pressure must be at least 20 psi.
	e. Flush valve chain too tight, holding flush valve open.	e. Readjust chain length as needed. Review Step 9A.
Toilet leaks	a. Poor supply line connection.	a. Review Step 8a and 8b of installation procedure.
	b. Poor bowl to tank/floor connection.	b. Review Step 4 through 6 of installation procedure.
Toilet does not shut off	a. Flush valve seal leaking or deformed.	a. Clean debris from seal surface. Replace flush valve seal as needed.
	b. Sand or debris lodged in water control.	b. Shut off water supply. Remove cap and clean as per Step 11.
	c. Water level set too high.	c. Set water level to mark on back of tank.

In the United States:

DXV
One Centennial Avenue
Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734
www.DXV.com

In Canada:

DXV
5900 Avebury Road
Mississauga, Ontario
L5R 3M3
Canada

Toll Free: 1-800-387-0369
Local: 905-306-1093
Fax: 1-800-395-1498
www.DXV.ca

In Mexico:

DXV
Via Morelos 330
Col. Santa Clara Coatitla
Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200
www.DXV.mx