

American Standard

Installation Instructions

COLONY SOFT

TWO HANDLE BATH/SHOWER SETS

3275

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.


Certified to comply with ANSI A112.18.1M
U.S. PATENT NO. D269,696

M968756 Rev.1.1



ROUGHING-IN DIMENSIONS

NOTE: NO CONCEALED PIPING FURNISHED

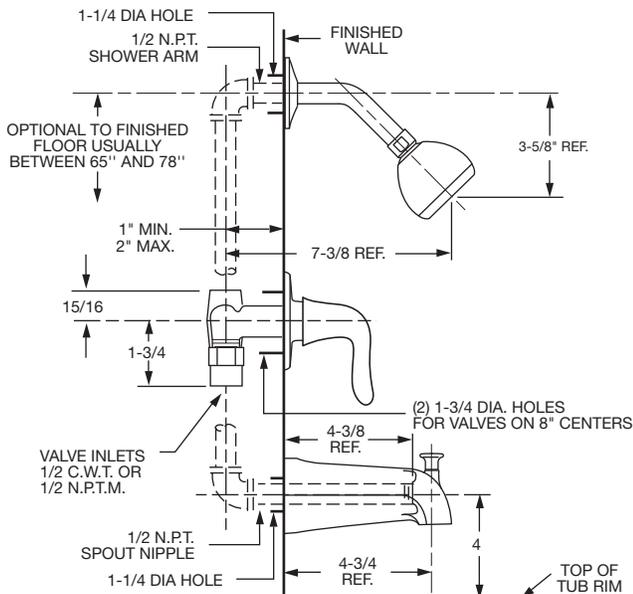

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

HOTLINE FOR HELP

NUMERO DE EMERGENCIA

ASSISTANCE TÉLÉPHONIQUE



For toll-free information and answers to your questions, call:
Para información y respuestas a sus preguntas, llame sin costo al:
Pour information et réponses à vos questions, composer sans frais:

1 800 442-1902
Weekdays: Días laborales de las Sur semaine: 8:00 to 6:00 p.m. EST
CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays: Días laborales de las Sur semaine: 8:00 to 7:00 p.m. EST

Product names listed herein are trademarks of American Standard Inc.
© AS America, Inc. 2008


1

CAUTION

Turn off hot and cold water supplies before beginning.

ROUGHING-IN FITTING IMPORTANT: DO NOT REMOVE PLASTER GUARDS (2) UNTIL STEP 2.

- Prepare water supplies per Roughing-in Dimensions.
- Install VALVE (1) at indicated height and depth. Make sure the outlet marked "SHR" is pointing upward.
- Apply Teflon Tape to threaded end of SUPPLY PIPE (6, 6a).
- Install SUPPLY PIPES (6, 6a) into round end of UNION (7, 7a).
- Hand tighten Hex End of UNION (7, 7a) onto valve inlet ports, then tighten with adjustable wrench an additional 1/2 turn.
- Secure VALVE BODY (1) to cross brace of wall structure.
- Prepare SHOWER RISER (4) and ELBOW (3). Connect to TOP outlet, marked "SHR" of VALVE BODY (1).
- Prepare TUB FILLER PIPE (8), ELBOW (10) and roughing-in NIPPLE (9). Connect to BOTTOM outlet of VALVE BODY (1).
- Add cross braces to wall structure and secure piping.
- Cap NIPPLE (9) and PLUG (5) ELBOW (3), open supply lines and check for leaks. Open both VALVES and check for leaks.
- Close both valves and turn off water supplies.
- Finish wall construction.

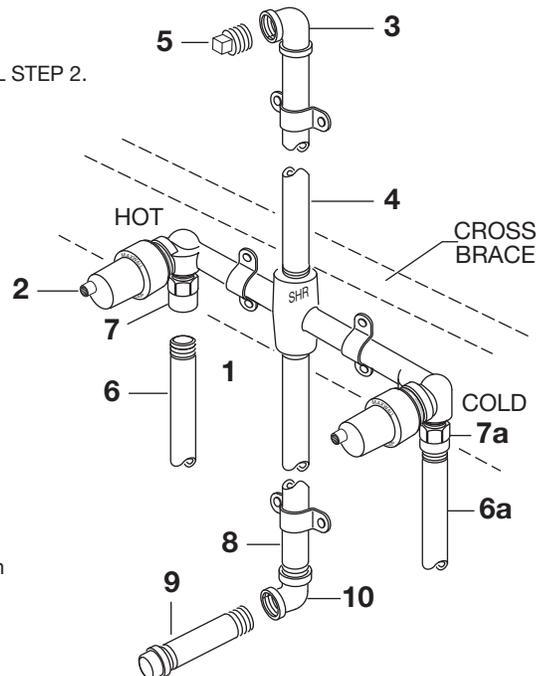


2

FINISHING INSTALLATION

- Unplug ELBOW (1) and uncap NIPPLE (2).
- Remove PLASTER GUARDS (3).
- Thread ESCUTCHEONS (4) onto VALVES (5) and install HANDLES (6).

To install LEVER HANDLES

- Turn HANDLE STEM (A) to "OFF" position.
 - Place the HANDLE ADAPTER (11) on the HANDLE STEM (A).
 - Install the ADAPTER SCREW (12) and tighten securely.
 - Position LEVER HANDLE (13) and place on ADAPTER (11). Install the HANDLE SET SCREW (14) and tighten securely.
- Assemble FLANGE (7) onto SHOWER ARM (8). Connect LONG leg of SHOWER ARM (8) to RISER ELBOW (1).
 - Assemble SHOWER HEAD (9) to SHORT leg of SHOWER ARM (8).
 - Assemble TUB SPOUT (10) to NIPPLE (2).

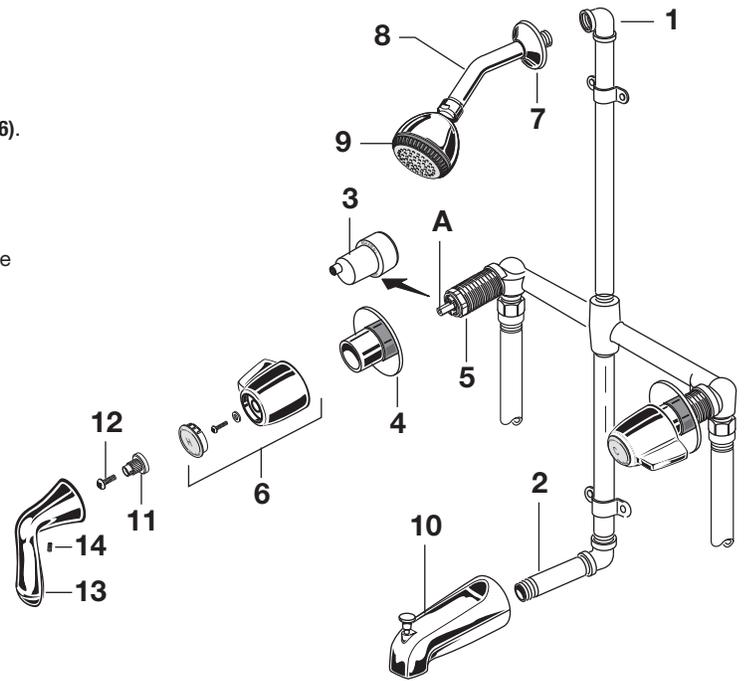

3

TEST INSTALLED FITTING

- Turn HANDLES to OFF position.
- Turn on water supplies and check for leaks.
- Operate both HANDLES to flush water lines thoroughly and check TUB SPOUT for leaks.
- Pull DIVERTER KNOB (bath/shower sets only) and check SHOWER HEAD connections for leaks.

American Standard

COLONY SOFT TWO HANDLE BATH/SHOWER

MODEL NUMBER

3275

Replace the "YYY" with appropriate finish code

CHROME	002
POLISHED BRASS	099

