INSTALLATION INSTRUCTIONS


Oak Hill[®] Personal Hand Shower with Adjustable Wall Mounted Bar

For use with automatic compensating valves rated at 4.5 L/min (1.2 gpm) Model D35155780

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.

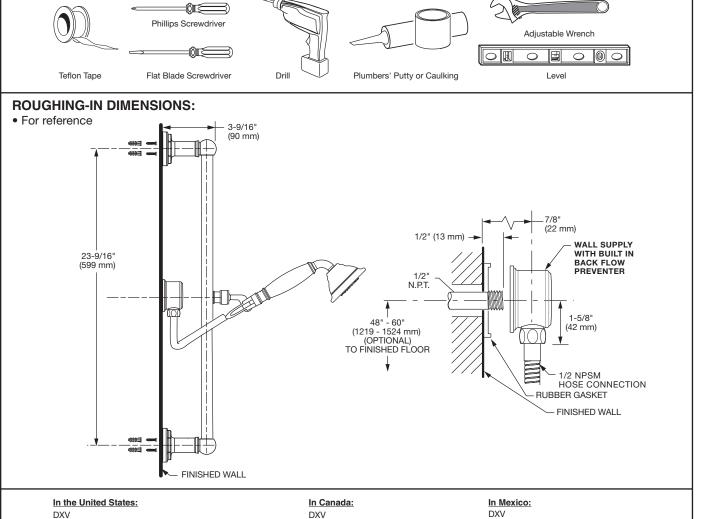



For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

Toll Free: 1-800-387-0369

5900 Avebury Road

L5R 3M3 Canada

Mississauga, Ontario

Local: 905-306-1093

Fax: 1-800-395-1498 www.DXV.ca



Via Morelos 330

www.DXV.mx

Col. Santa Clara Coatitla

Toll Free: 01-800-8391200

Ecatepec, Estado de México 55540

ш

S N

ш

ſ

Ш.

£

0

ш

ш

>

∢

ഗ

INSTALL WALL SUPPLY


CAUTION Turn off hot and cold water supplies before beginning.

- Supply to WALL SUPPLY (1) is 1/2" (13 mm) NPT. See rough-in above for detailed information.
- Install RUBBER SEAL (2) onto WALL SUPPLY (1).
- Apply sealant or teflon tape to threads of 1/2" (13 mm) NPT supply nipple. Thread WALL SUPPLY (1) onto supply nipple making a water tight seal. WALL SUPPLY (1) with RUBBER SEAL (2) should be tight against finished wall.

INSTALL WALL BRACKETS

2

- The ADJUSTABLE SHOWER BAR (1) works best if secured to a wall stud or cross brace within the wall, using the MOUNTING SCREWS (2) supplied.
- If the ADJUSTABLE SHOWER BAR (1) is to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) of the top MOUNTING PLATE (4). NOTE: MEASURMENT IS APPROXIMATE ONLY, PLEASE USE BAR AS TEMPLATE FOR ACTUAL CENTER TO CENTER MEASUREMENTS. Use a level to make sure the center line between the two MOUNTING PLATES (4) is vertical. If the MOUNTING PLATES (4) are secured to a stud or cross brace, drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (4) to finished wall. Drill six 1/4" dia. holes a minimum of 1-3/4" deep. Insert the ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATES (4) to wall with SCREWS (2).

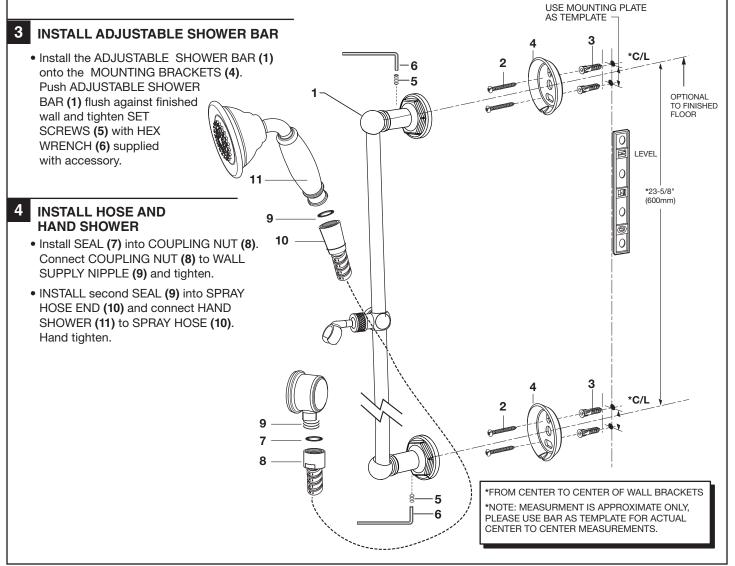

1/2" NPT

APPLY SEALANT

5 TEST INSTALLED HAND SHOWER

- Remove Hand Shower from the hose. Turn water supplies on to flush water lines thoroughly.
- Turn handles "off" and replace HAND SHOWER (1).
- Lift HAND SHOWER (1) from HOLDER (2) and direct spray into tub. Turn hand shower valve on to check HAND SHOWER (1) for proper operation and hose connections for leaks.
- Use KNOB (3) on HOLDER (2) to adjust HAND SHOWER (1) height on slide bar.

