
# **Keefe® Wall Mounted Accessories**


Robe Hook - Model D35104210 Towel Ring - Model D35104190 Towel Bar 24" - Model D35104240 Tissue Holder - Model D35104235

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

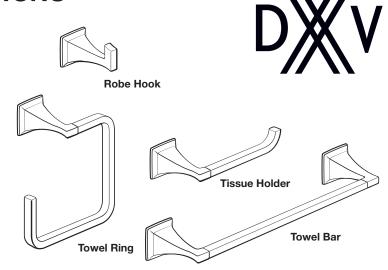

#### RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.












### **ROUGHING-IN DIMENSIONS:**

• For reference **Towel Ring** 

3-5/8"

(92mm)

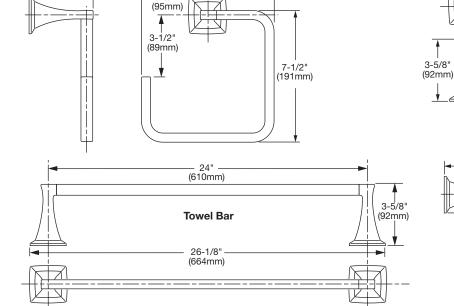


7-1/2"

(191mm)

3-3/4"

# 7-9/16" (192mm) 2-1/16" (52mm)

**Tissue Holder** 



Robe Hook

#### **Available Finishes** POLISHED CHROME 100 **BRUSHED NICKEL** 144

#### In the United States:

DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

#### In Canada:

5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

#### In Mexico:

DXV Via Morelos 330

Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

www.DXV.mx

Toll Free: 01-800-8391200


ш

S

ш

# 1 INSTALL WALL BRACKET

- The wall mounted accessories (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. *IMPORTANT: The \*center line for the MOUNTING PLATE (4) must be level or the wall accessory will not mount level.* Using the MOUNTING PLATE (4) as a template mark the three spots for the ANCHORS (3). If MOUNTING PLATE (4) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (4) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATE (4) to wall with SCREWS (2).

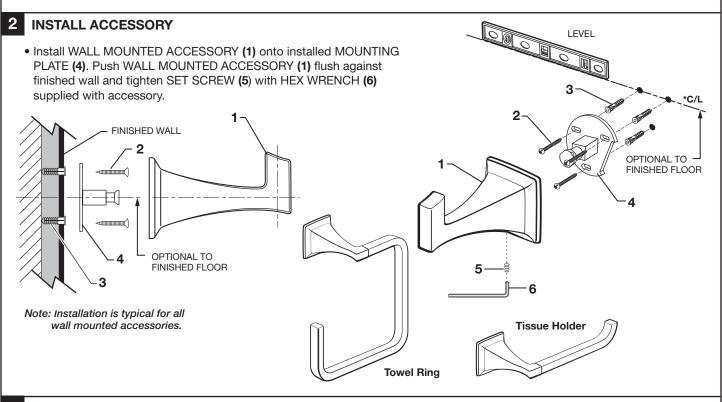

# 3 INSTALL 24" TOWEL BAR

- The TOWEL BAR (1) work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the TOWEL BAR (1) is to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. IMPORTANT: The \*center line for the MOUNTING PLATES (4) must be level or the wall accessory will not mount level.

  Using the MOUNTING PLATE (4) as a template mark the six spots for the ANCHORS (3). If MOUNTING PLATE (4) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (4) to finished wall. Drill six 1/4" dia. holes a minimum of 1-3/4" deep. Insert the six ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATES (4) to wall with SCREWS (2).
- Install TOWEL BAR (1) onto installed MOUNTING PLATES (4). Push
  TOWEL BAR (1) flush against finished wall. Tighten SET SCREW (5) on
  both ends of TOWEL BAR (1) with HEX WRENCH (6) supplied with accessory.

Towel Bar

1 610mm
(24")

USE MOUNTING PLATE
AS TEMPLATE TO MARL
HOLE LOCATION

4 OPTIONAL TO
FINISHED FLOOR
(50" TO 60")

6 FROM CENTER TO CENTER OF WALL BRACKETS

\*NOTE: MEASURMENT IS APPROXIMATE ONLY,
PLEASE USE BAR AS TEMPLATE FOR ACTUAL
CENTER TO CENTER MEASUREMENTS.