# **Equility**<sup>™</sup> (Formerly LYNDON®) **Single Lever Faucet** with Grid Drain

Vessel Model D35109151 Monoblock Model D35109152



Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

### RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.











Ш

S

Ш

 $\mathbf{\alpha}$ 

 $\mathbf{\alpha}$ 

0

Ш

⋖

S

Adjustable Wrench

Channel Locks

**Tubing Cutter** 


Flat Blade Screwdriver

Plumber's Putty or Caulking

### **ROUGHING-IN DIMENSIONS:**

NOTE: Mounting holes are 1-3/8" D.

## D35109152 \_\_ 7" \_\_ (176 mm) 1-5/8" (42 mm) 3-5/8" 5-3/4" 3-11/16 (146 mm) (93 mm)

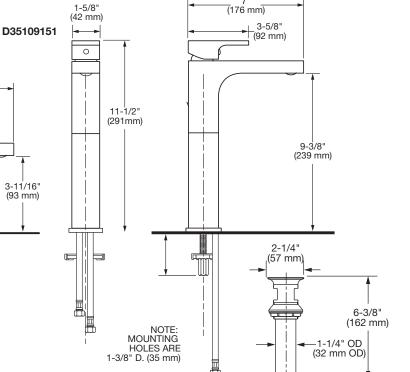

#### In the United States:

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

#### In Canada:

5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

#### In Mexico:

Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540


Toll Free: 01-800-8391200

www.DXV.mx

### 1 INSTALL FAUCET


**CAUTION** Turn off hot and cold water supplies before beginning.

- Install SEAL (1) into groove of FAUCET BASE (2).
- Feed FAUCET SUPPLY TUBES (5) and SHANK (3) through mounting hole of lavatory or mounting surface.
- From below, Install RUBBER SEAL with RETAINING WASHER (4) and LOCKNUT (6) onto faucet SHANK (3). Before final tightening, faucet should be seated flush on mounting surface. Adjust faucet so that it is centered and covers mounting hole. Tighten LOCKNUT (6) using a 15 mm or adjustable wrench. Do not over tighten.

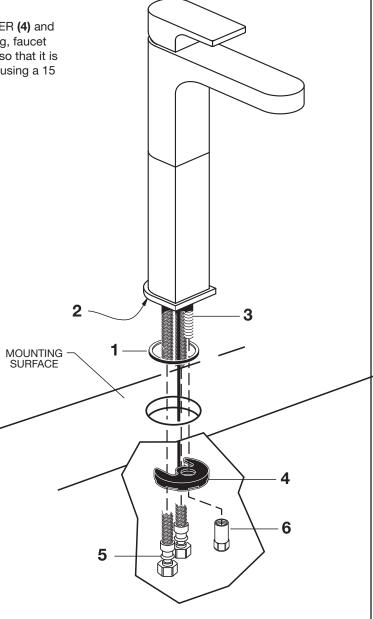

## 2 DRAIN ASSEMBLY

- Apply a bead of PUTTY around underside of DRAIN FLANGE (1) flange. Insert DRAIN PLUG (2) into SINK drain hole.
- Hold DRAIN PLUG (2) to prevent turning and assemble GASKET (3), WASHER (4), and LOCKNUT (5) from underneath sink.
- Apply sealant to threaded end of TAILPIECE and thread into lower end of DRAIN PLUG. Connect other end to trap.

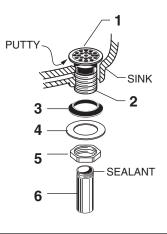


### MAKE WATER SUPPLY AND WASTE CONNECTIONS

- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" (10 mm) compression. Connect left SUPPLY (1) to Hot (Marked with a Red Band) and right supply to COLD (2) wall supply.
- Faucet supplies are 24" (610 mm) long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

• Connect 1-1/4" O.D. (32 mm) tailpiece on DRAIN to waste outlet.

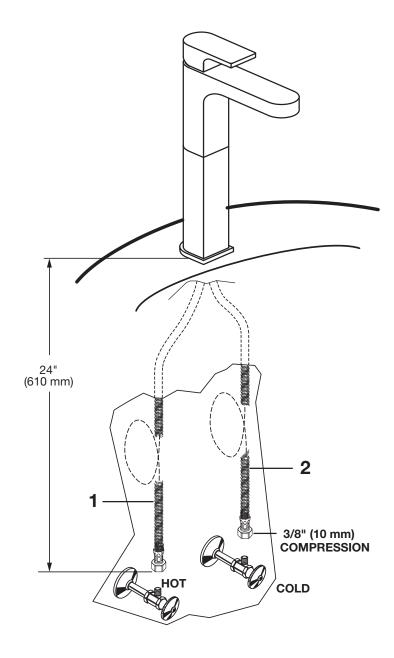


## 4 TEST INSTALLED FITTING

- Move HANDLE (1) into "off" position.
- Remove AERATOR (4) and clean if necessary.
- Turn on water supplies and check all connections for leaks.
- Operate both HANDLES to flush water lines thoroughly.
- Replace AERATOR.

### **CHECK DRAIN CONNECTIONS**

• Check all drain connections and "P" trap for leaks. ➡ Tighten if necessary.

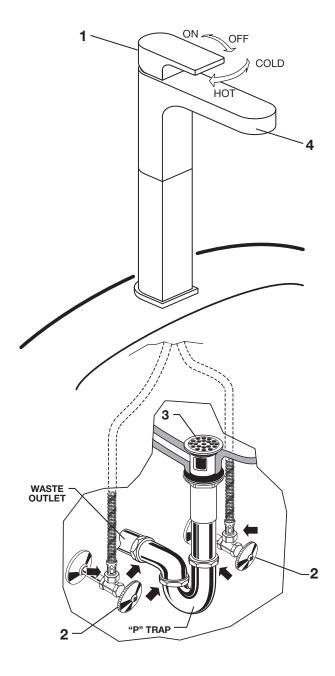


### 5 SERVICE

# CAUTION Turn off hot and cold water supplies before beginning.

- To remove or replace cartidge:
  - Turn valve to OFF position.
  - Pull out PLUG BUTTON (1) and loosen HANDLE SCREW (2).
  - Pull off HANDLE (3).
  - Unthread and remove CARTRIDGE NUT (4) with CARTRIDGE RING NUT KEY (9). For Polished Chrome
  - Pull CARTRIDGE COVER (10) off and unthread CARTRIDGE RING NUT (11).

#### For Brushed Nickel and Matte Black

- Pull out CARTRIDGE (5).
- Inspect CARTRIDGE (5) and O-RINGS (6) for debris and clean if necessary.
- Clean MANIFOLD (7) and rinse clean.
- Reinstall CARTRIDGE (5) and O-RINGS (6) onto MANIFOLD (7).
- Reinstall CARTRIDGE NUT (4), CARTRIDGE RING NUT KEY (9) and HANDLE ASSEMBLY (3). For Polished Chrome
- Reinstall CARTRIDGE RING NUT (11), CARTRIDGE COVER (10) and HANDLE ASSEMBLY (3). For Brushed Nickel and Matte Black
- If spout drips, operate handle several times from OFF to ON and HOT to COLD position.
  Do not force handle.
- AERATOR (8) may accumulate debris causing distorted or reduced water flow.
  Remove AERATOR (8) and and/or water supplies and rinse clean.

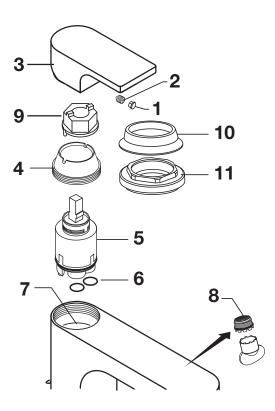

## 6 CARE INSTRUCTIONS:

**DO:** SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

**DO NOT:** DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

