

# INSTALLATION INSTRUCTIONS




## Keefe® Handle Trim Kit for 2 Way or 3 Way In-Wall Diverter

Model D35104430

To be used with

D35000420.191 - 3/2 Two Way In-Wall Diverter


D35000430.191 - 4/3 Three Way In-Wall Diverter

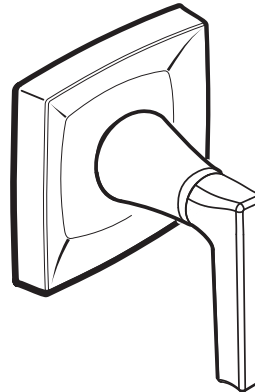

*Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.*

### RECOMMENDED TOOLS AND MATERIALS


Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.

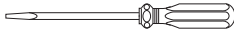

Flat Blade Screwdriver




Phillips Screwdriver

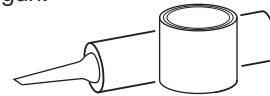

Plumbers' Putty or Caulking

### ROUGHING-IN DIMENSIONS:

- For reference

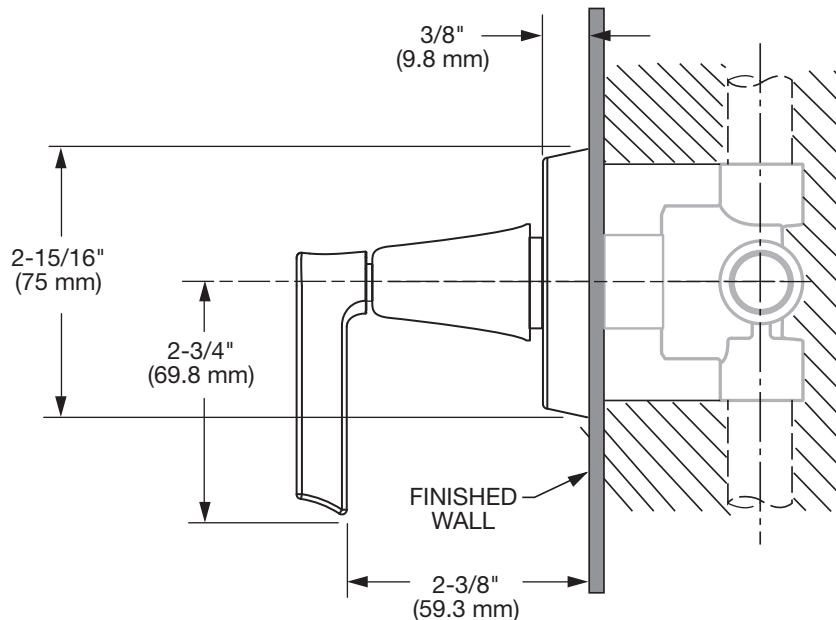

#### In the United States:

DXV  
One Centennial Avenue  
Piscataway, New Jersey 08855  
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734  
[www.DXV.com](http://www.DXV.com)

#### In Canada:

DXV  
5900 Avebury Road  
Mississauga, Ontario  
L5R 3M3  
Canada

Toll Free: 1-800-387-0369  
Local: 905-306-1093  
Fax: 1-800-395-1498  
[www.DXV.ca](http://www.DXV.ca)

#### In Mexico:

DXV  
Via Morelos 330  
Col. Santa Clara Coatitla  
Ecatepec, Estado de México 55540





Toll Free: 01-800-8391200  
[www.DXV.mx](http://www.DXV.mx)

S A V E F O R F U T U R E U S E

## 1 INSTALL VALVE TRIM TWO-WAY OR THREE-WAY DIVERTER VALVE

**CAUTION** Turn off hot and cold water supplies before beginning.

- Twist and pull off PLASTER GUARD (1). (TWO AND THREE WAY VALVES) Install ESCUTCHEON (4) onto ESCUTCHEON HOLDER (2). **Fig. A.**
- Thread ESCUTCHEON HOLDER (2) with ESCUTCHEON (4) onto DIVERTER VALVE (3) until ESCUTCHEON (4) is flush against finished wall. **Fig. B.**
- Turn VALVE STEM (5) clockwise to the off position. Align LEVER HANDLE ASSEMBLY (6) as shown or as desired and install HANDLE ASSEMBLY (6) onto VALVE STEM (5). Thread HANDLE BASE (7) clockwise onto HANDLE ADAPTER (2) until seated tightly against stop. **Fig. C.**
- Installation complete. Test Valve. **Fig. D.**

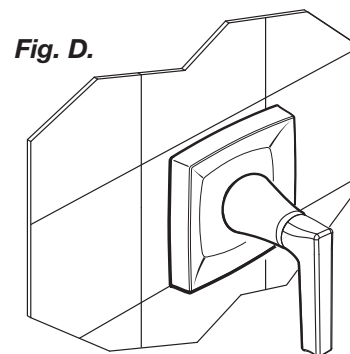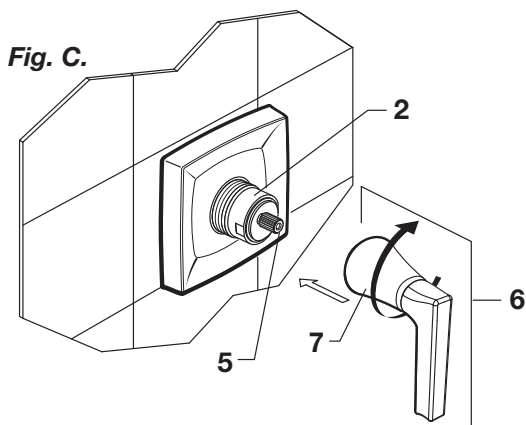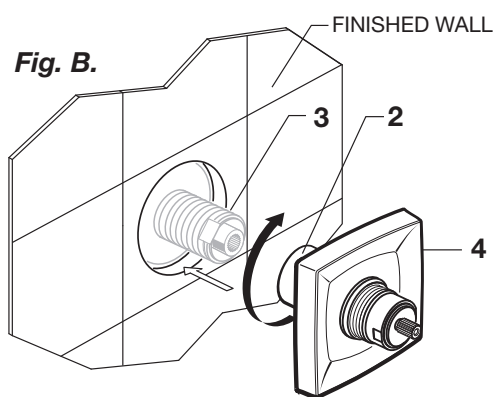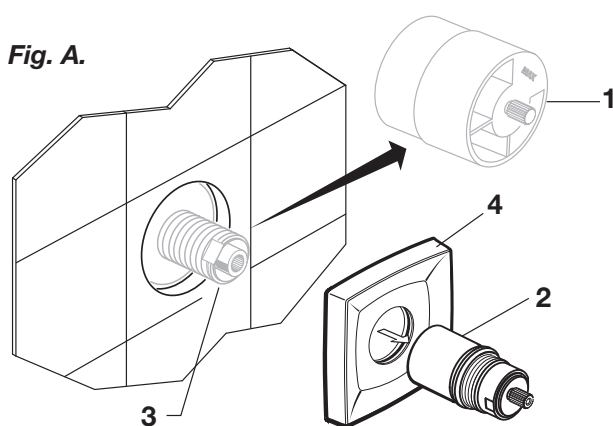



**Keefe®**  
**Handle Trim Kit for 2 Way  
or 3 Way In-Wall Diverter**

MODEL NUMBER

**D35104430**

Replace the “YYY” with  
appropriate finish code

POLISHED CHROME	100
BRUSHED NICKEL	144

