
Landfair® **Adjustable Personal Hand Shower Bar**

Model D3510779C

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

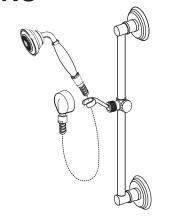



Ш

S

Ш

 $\mathbf{\alpha}$

0


Ш

4


S

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.

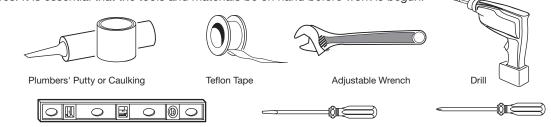



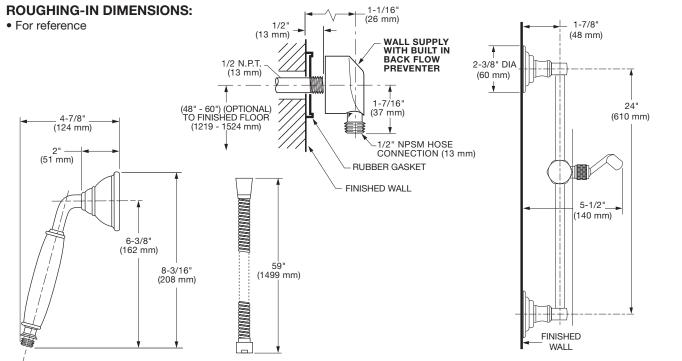

In the United States:

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

Via Morelos 330

Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200


www.DXV.mx

INSTALL WALL ANCHORS

- The ADJUSTABLE SHOWER BAR works best if secured to a wall stud or cross brace within the wall, using the SCREWS supplied.
- If the ADJUSTABLE SHOWER BAR is to be installed on a tile or plaster wall the ANCHORS (1) and
- Determine desired height and location (optional) and mark the top center line. Use a level to help mark the vertical center line for the two mounting locations. The distance between the two mounting holes is 24" (610 mm).


Note: This dimension is important and must be maintained. If ESCUTCHEON is secured to a stud or cross brace with in the wall, drill small pilot holes for SCREWS (2).

• For installations on drywall or tiled walls: Use ANCHORS (1) and SCREWS (2) for securing ESCUTCHEON to finished wall. Drill two 1/4" (6 mm) dia. holes a minimum of 1-3/4" (44 mm) deep. Insert the two ANCHORS (1) flush with face of the finished wall.

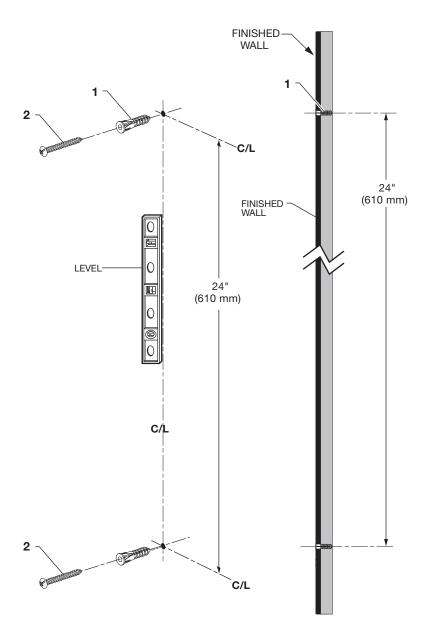


2 INSTALL ADJUSTABLE SHOWER BAR

- Secure the top ESCUTCHEON (1) and MOUNTING SLEEVE (2) to the wall using MOUNTING SCREWS (3). Do not fully tighten. Fig. A
- Secure the BOTTOM ESCUTCHEON (1A) in the same way. Fig. A
- Install the SHOWER BAR (4) into the two MOUNTING SLEEVES (2). Adjust ESCUTCHEONS (1) if needed. After alignment is made remove the SHOWER BAR (4) and tighten the MOUNTING SCREWS (3) fully. Fig. B
- Install the SHOWER BAR (4) back into the two MOUNTING SLEEVES (2) as far as it will go. Tighten the two SET SCREWS (5) with hex wrench supplied to secure the SHOWER BAR (4). Fig. B

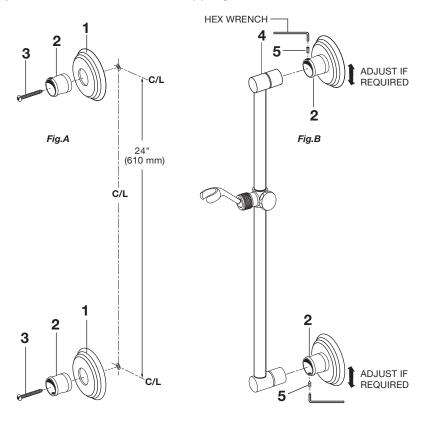

3 TEST INSTALLED HAND SHOWER

- Remove Hand Shower from the hose.
 Turn water supplies on to flush water lines thoroughly.
- Turn handles "off" and replace HAND SHOWER.
- Use KNOB (3) on HOLDER (2) to adjust HAND SHOWER (1) height on slide bar.

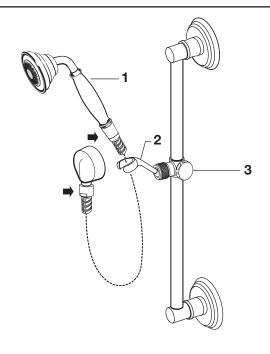



Landfair MD Adjustable Personal Hand Shower Bar

MODEL NUMBER

D3510779C

Replace the "YYY" with appropriate finish code

POLISHED CHROME	100
CARBON BRONZE	110
BRUSHED NICKEL	144
PLATINUM NICKEL	150

