Ш

S

Ш

 α

 $\mathbf{\alpha}$ 0

Ш


DXV Modulus[™] **Handle Trim Kit for** 2 Way or 3 Way In-Wall Diverter

Model D35120430

To be used with

D35000420.191 - 3/2 Two Way In-Wall Diverter D35000430.191 - 4/3 Three Way In-Wall Diverter


Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

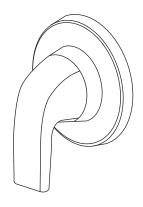

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work has begun.








Phillips Screwdriver



Plumbers' Putty or Caulking

TRIM DIMENSIONS:

• For reference

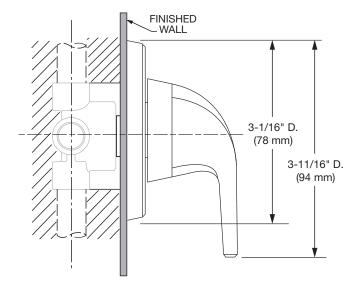

In the United States:

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV Via Morelos 330

Col. Santa Clara Coatitla Ecatepec, Estado de México 55540


Toll Free: 01-800-8391200 www.DXV.mx

INSTALL HANDLE

CAUTION Turn off hot and cold water supplies before beginning.

- Install ADAPTER (9) onto VALVE STEM (5) and secure with SCREW (10).
- Install ESCUTCHEON (1) onto ESCUTCHEON HOLDER (2). Apply sealant to groove on back side of ESCUTCHEON (1). Thread ESCUTCHEON HOLDER (2) with ESCUTCHEON (1) onto DIVERTER VALVE (3) until ESCUTCHEON (1) is tight against FINISHED WALL.
- With VALVE in off position align LEVER HANDLE (4) as shown. Install LEVER HANDLE (4) onto VALVE STEM (9). Tighten SET SCREW (6) with (2.5 mm) HEX WRENCH (7) supplied to secure HANDLE (4).



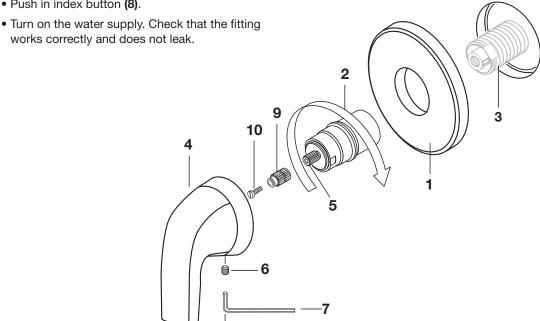

– 8

