
Model D35155450 - Lever Handle Model D35155470 - Cross Handle

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

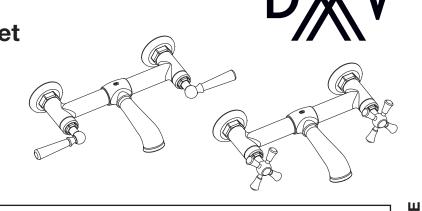


RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.











S

ш

 α

 α

0

ഗ


Adjustable Wrench


Channel Locks

Sealing


ROUGHING-IN DIMENSIONS:


• For reference





WALL INSTALLATION

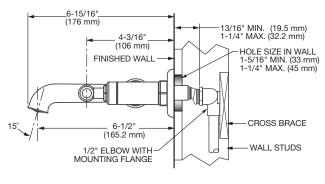

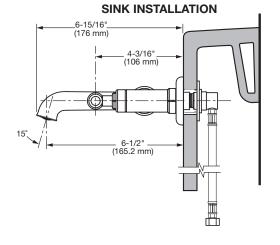

In the United States:

DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV Via Morelos 330


Col. Santa Clara Coatitla Ecatepec, Estado de México 55540


Toll Free: 01-800-8391200 www.DXV.mx

DXV SINK INSTALLATION

1 INSTALL MOUNTING WASHERS


• Install METAL WASHER (1) and RUBBER WASHER (2) onto each SUPPLY SHANK (3).

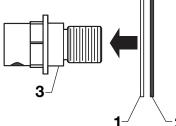


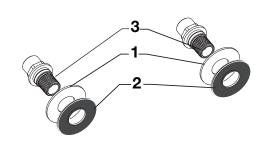

2 INSTALL SUPPLY SHANKS TO LAVATORY


- From behind the sink, insert SUPPLY SHANKS (3) with washers into the faucet holes.
- Install ESCUTCHEON (4) and ADAPTER NUT (5) onto each SUPPLY SHANK (3). Hand tighten. These parts must be installed loosely and should be able to move around within the two sink holes. Keep Inlet Holes on SUPPLY SHANKS (3) facing down.

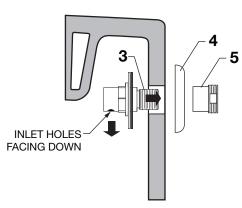


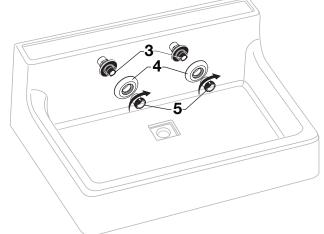

3 ATTACH FAUCET BODY

- Insert faucet inlets into previously installed ADAPTER NUTS and SUPPLY SHANKS.
- Gradually hand tighten MOUNTING NUTS (6) evenly. If they become too difficult to turn and are binding, please check the following:
 - The mounting parts are not loose enough.
 - One side has been over tightened too much and the body is uneven.

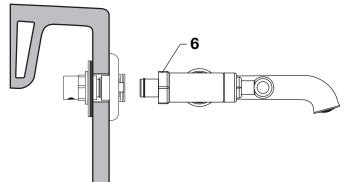


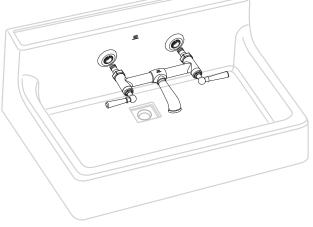


DXV SINK INSTALLATION

4 REALIGN MOUNTING PARTS


- Make sure both inlet holes on SUPPLY SHANKS (3) are still facing downward.
- Check that the faucet is level and make sure both MOUNTING NUTS (6) are fully threaded against the ESCUTCHEONS (4). Align faucet body with the DXV logo on sink.
- To fully tighten MOUNTING NUTS (6): turn faucet nut clockwise while holding SUPPLY SHANKS (3) nut.

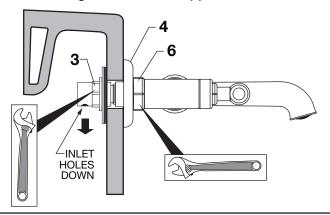


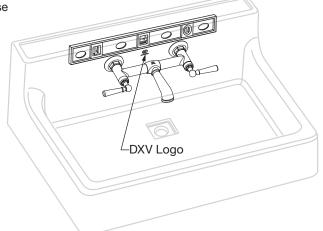

5 INSTALL SUPPLY HOSES

- Thread SUPPLY HOSES (7) into SUPPLY SHANK (3) inlet holes. Tighten with adjustable wrench.
- Connect SUPPLY HOSES (7) to Hot and Cold wall supplies. Loop SUPPLY HOSES (7) if necessary to avoid kinking.

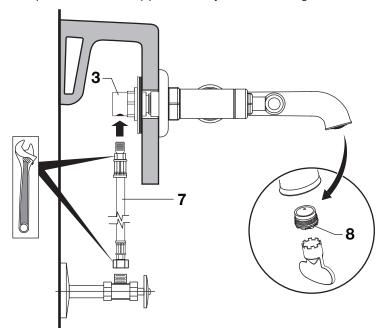

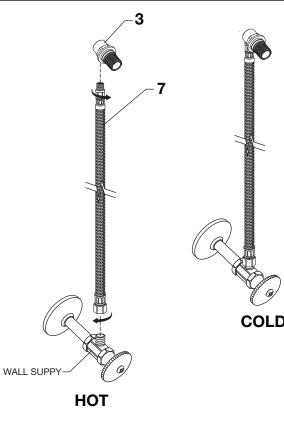

6 TEST INSTALLED FAUCET


- With HANDLES in OFF position, turn on water supplies and check all connections for leaks.
- Remove AERATOR (8) with the key provided.
- Operate HANDLES to flush water lines thoroughly.
- Re-install AERATOR (8) and tighten.


WALL-MOUNT INSTALLATION

WALL MOUNT INSTALLATION

• Determine where the finished wall location will be. *This measurement is very important!*Note: The rough-in measurement from the end of the elbow to the finished wall is a minimum of 13/16" (19mm) and a maximum of 1-1/4" (32.2mm).

Determine the height of the faucet from the finished floor and mark the center line of each ELBOW (9) exactly 8" apart on the wood support. Attach the two ELBOWS (9) to the wood support with wood screws on each center line. Check that the ELBOWS (9) are level.

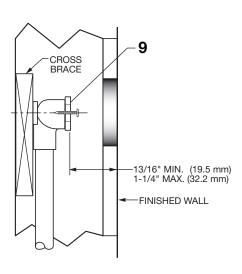

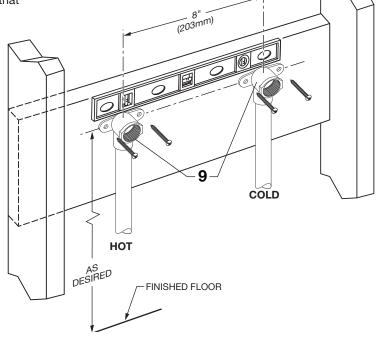



2 INSTALL PIPE PLUGS

Apply SEALING TAPE to PIPE PLUGS and thread into the ELBOWS (9).
Test all concealed piping for leaks.

• Finish all wall construction. The faucet holes through the wall are 1-5/16" MIN. (33mm) and a 1-3/4" MAX. (45mm) with centers 8" apart.

- 4 -

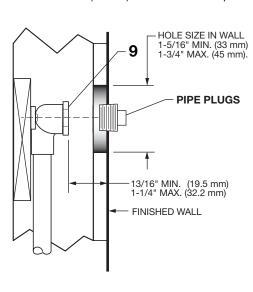

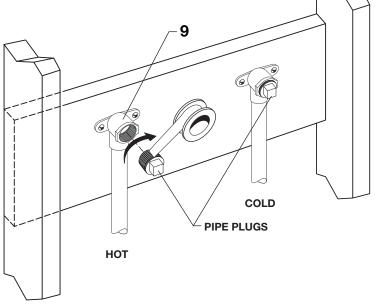



M965648 Rev. 1.1 (9/17)

WALL-MOUNT INSTALLATION


3 ALIGN OFFSET SHANKS

- Turn off water supplies. Remove the two PIPE PLUGS. Apply SEALING TAPE to the end of each OFFSET SHANK (10) and thread into each ELBOW (9) with a 8mm HEX WRENCH.
- Check that the OFFSET SHANKS (10) are level and centers are 8" (203mm) apart. *Distance needs to be maintained accurately.*



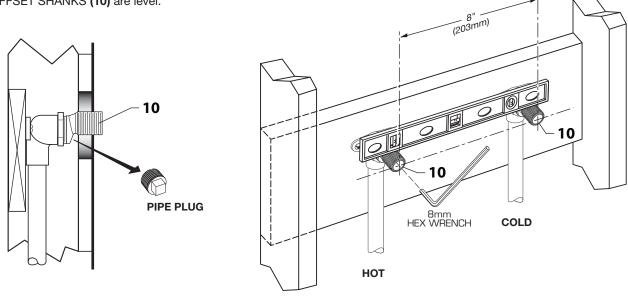

ALIGN FAUCET WITH SHANKS

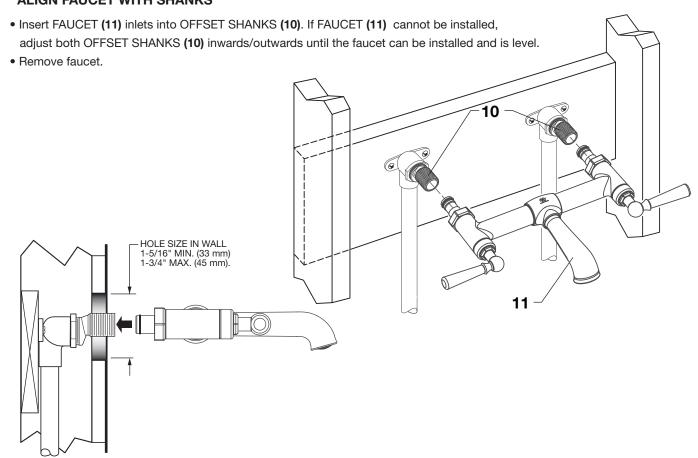



M965648 Rev. 1.1 (9/17)

WALL-MOUNT INSTALLATION

4 INSTALL ESCUTCHEONS AND ADAPTER NUTS

• Install ESCUTCHEON (4) and ADAPTER NUT (5) onto each OFFSET SHANK (10). Gradually tighten ADAPTER NUTS (5) until ESCUTCHEONS (4) are flush against the finished wall.

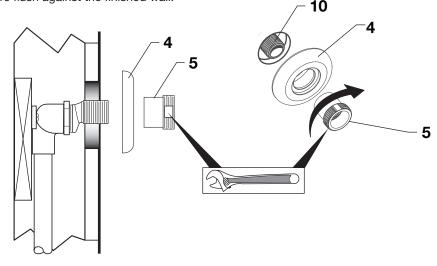

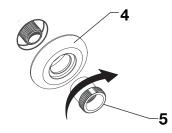



5 INSTALL FAUCET

• Insert faucet inlets into ADAPTER NUTS (5) and OFFSET SHANKS (10).

• Gradually tighten MOUNTING NUTS (6) evenlty. If they become too difficult to turn and are binding, please check the following:

- One side has been tightened too much and the body is uneven.



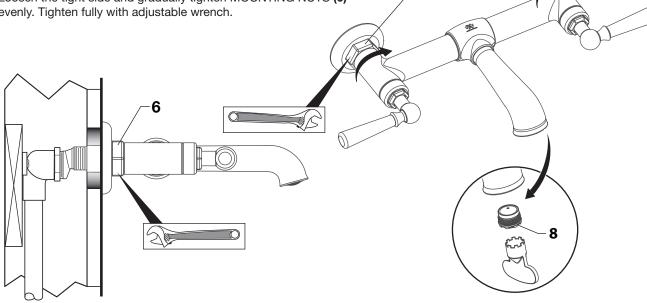

TEST INSTALLED FAUCET

- With HANDLES in OFF position, turn on water supplies and check all connections for leaks.
- Remove AERATOR (8) with the key provided.
- Operate HANDLES to flush water lines thoroughly.
- Re-install AERATOR (8) and tighten.

6a REMOVAL OF THE HANDLE KNOB,

• Unthread the lever, loosen the set screw inside the knob and pull knob off stem.



Oak Hill™ **Wall-Mount Lavatory Faucet**

MODEL NUMBERS


Lever Handle

D35155450

Cross Handle

D35155470

Replace the "YYY" with appropriate finish code



H960136.191 1/2" CARTRIDGE (CLOCKWISE ON)

H960104.191 1/2" CARTRIDGE (COUNTER-CLOCKWISE ON)

> M970350-YYY0A HANDLE KIT

M964987-YYY0A MOUNTING KIT

M964986-0070A

M964984-YYY0A HANDLE KIT

SET SCREW AND SEAL KIT

H960136.191 1/2" CARTRIDGE (CLOCKWISE ON)

H960104.191 1/2" CARTRIDGE (COUNTER-CLOCKWISE ON)

M964985-0070A **AERATOR**