

THE BEST BATH OR SHOWER EXPERIENCE? THE ONE NOBODY INTERRUPTS.

Thank you for buying an American Standard bath or shower product.

We're so grateful you did, and you will be too. Not just while you're waking up each morning, but also every time a dirty gardener, sweaty soccer player, or muddy dog gets cleaned up. How do we know? Just like you, we've lived with that same beautiful chaos called life for almost 150 years. We believe that while every home should appreciate in value, we never forget the sentimental value that grows from enjoying life in the heart of home—your kitchen and bath. That's why we love your stories and ideas; they help us innovate with products that make your life easier.

Or, visit **americanstandard-us.com/bathroom/tub-and-shower-doors** to watch video, view/download installation manuals or learn more about your product.

Have a question or need help on install?

For questions or help on installation call us at **800-442-1902**.

For a copy of our warranty in additional languages,
please visit Americanstandard.com

American Standard

OWNERS MANUAL

Elevate® Curved Corner Shower Door AM00840400

INSTALLATION INSTRUCTIONS

Thank you for selecting American Standard – the benchmark of fine quality for over 150 years. To ensure this product is installed properly, please read these instructions carefully before you begin. Certain installations may require professional help. Also be sure your installation conforms to local codes.


INSTALLATION PREPARATION

- Please unpack carefully and identify all parts needed for installation by using the Box Contents page as a reference. Inspect the product and report any damages or missing parts immediately to customer care by calling 800-442-1902. Follow the prompts for consumer/shower doors.
- These Elevate shower doors were developed to be installed with the Elevate shower base and Elevate shower walls. If you are using a different base and wall set, you may need additional hardware and tools to complete the installation.
- Handle the glass panels carefully and protect the edges. Unequal pressure applied during installation can cause cracking or breakage, and the sharp corners on the glass panels can cause damage to the wall or floor materials.
- Ensure adequate wall support is provided to area where shower door is to be installed.
- Shower base and wall material must be installed prior to the door installation.
- Wear protective equipment during installation to avoid injury.
- Please keep these instructions for after care and customer service details.

⚠ WARNING: PRODUCT IS HEAVY AND REQUIRES TWO PEOPLE FOR INSTALLATION.

⚠ WARNING: TEMPERED GLASS CANNOT BE DRILLED, CUT OR MODIFIED.

INSIDE THE BOX

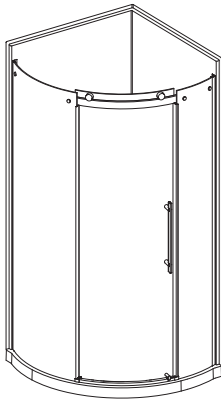


36"x 72" Curved Shower Door

Image shown may vary from product purchased.

RECOMMENDED TOOLS AND MATERIALS

Installation steps will indicate which tools should be used with associated letter

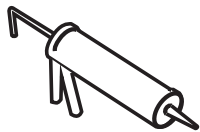


Caulking Gun

A



Level

B

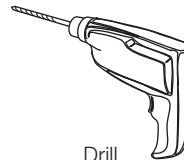

Drill

C



1/4" (6 mm)
Drill Bits #2 Square Drive Bit

D



Regular
Screwdriver

E



1/8" (3.2 mm)
Drill Bits #2 Square Drive Bit

F




Phillips
Screwdriver

G



Hammer

H



Pencil

I



Tape
Measure

J



Safety
Equipment

K








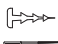
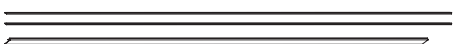



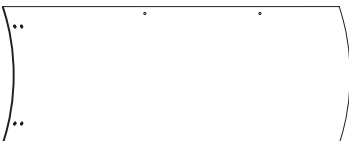
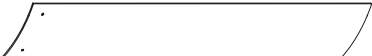













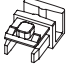
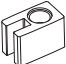








BEFORE YOU BEGIN


Inspect your product thoroughly before installing. Take extra care in handling surfaces of the bath and use only non-abrasive cloths to avoid scratching. Observe all local plumbing and building codes.

American Standard

BOX CONTENTS

1x Installation Instruction	➔	
[1] 1x Top Rail	➔	 
[2] 1x Bottom Threshold	➔	 
[3] 2x Wall Posts	➔	 
[4] 2x Inserted Gaskets	➔	 
[5] 1x Side Gasket (Longer)		
[6] 1x Side Gasket (Shorter)		
[7] 1x Magnetic Seal (Longer)	➔	 
[8] 1x Magnetic Seal (Shorter)		
[9] 1x Fixed Panel A.	➔	
[10] 1x Door Panel-L	➔	
[11] 1x Fixed Panel B	➔	
[12] 1x Handle Set	➔	
[13] 2x Exterior Wheels	➔	 
[14] 4x Fasteners	➔	   
[15] 2x Interior Adjust Wheels	➔	 
[16] 1x Wrench	➔	  
[17] 1x 2 mm Allen Key		
[18] 1x 2.5 mm Allen Key		
[19] 1x Bottom Guide A	➔	    
[20] 1x Bottom Guide B		
[21] 1x End Cap		
[22] 1x Screw Cap		
[23] 2x Screw St4x25		
[24] 6x Wall Anchors	➔	
[25] 6x Screws ST4x35		
[26] 6x Screw Caps	➔	
[27] 6x Back Screw Caps		
[28] 1x Installation aid	➔	
[29] 1x Glass Stabilizer	➔	

ASSEMBLY DRAWING

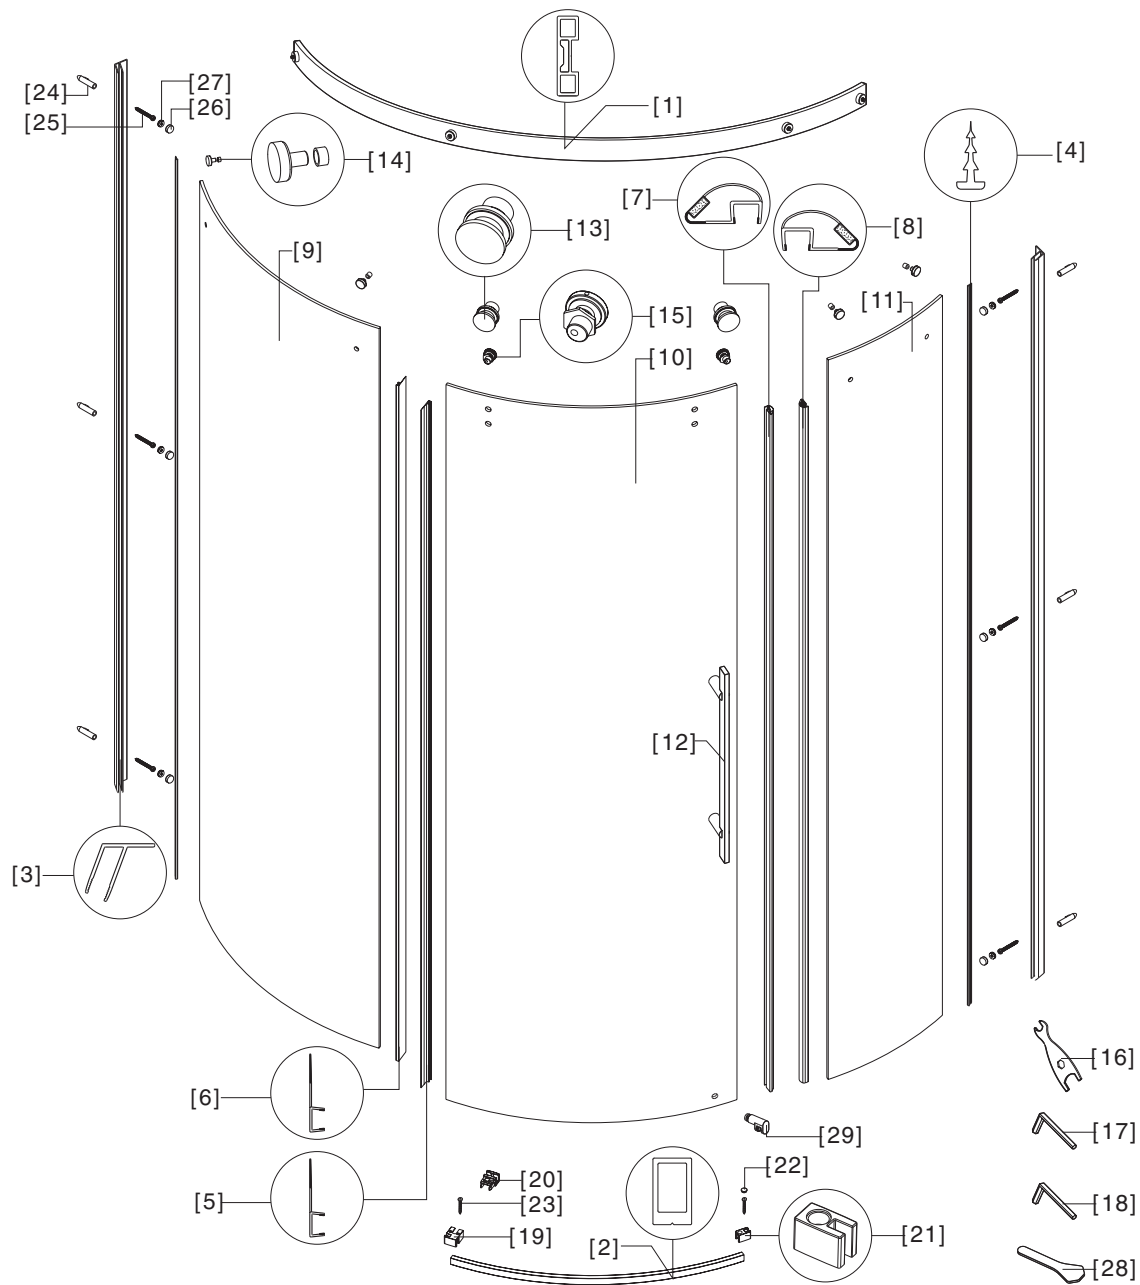

- | | | |
|--------------------------------|--------------------------------|--------------------------|
| [1] 1x Top Rail | [11] 1x Fixed Panel B | [21] 1x End Cap |
| [2] 1x Bottom Threshold | [12] 1x Handle Set | [22] 1x Screw Cap |
| [3] 2x Wall Posts | [13] 2x Exterior Wheels | [23] 2x Screw ST4x25 |
| [4] 2x Inserted Gaskets | [14] 4x Fasteners | [24] 6x Wall Anchors |
| [5] 1x Side Gasket (Longer) | [15] 2x Interior Adjust Wheels | [25] 6x Screws ST4x35 |
| [6] 1x Side Gasket (Shorter) | [16] 1x Wrench | [26] 6x Screw Caps |
| [7] 1x Magnetic Seal Longer | [17] 1x 2 mm Allen Key | [27] 6x Back Screw Caps |
| [8] 1x Magnetic Seal (Shorter) | [18] 1x 2.5 mm Allen Key | [28] 1x Installation aid |
| [9] 1x Fixed Panel A | [19] 1x Bottom Guide A-L | [29] 1x Glass Stabilizer |
| [10] 1x Door Panel-L | [20] 1x Bottom Guide B | |

American Standard

INSTALLATION INSTRUCTIONS

IMPORTANT GENERAL INFORMATION

This unit is best installed by two people.

Cover drain with tape prior to installation to prevent the loss of small parts.

Unpack your unit carefully and inspect for freight damage. Lay out and identify all parts using Box Contents and Assembly Drawing as a reference. Before discarding the carton check to see that no small hardware parts have fallen to the bottom of the box. If any parts are damaged or missing refer to the description noted in the instructions when inquiring about replacements.

Handle the glass panels carefully and protect the edges. Although tempered glass is very resistant to breakage, the glass can still break if unequal pressure is applied during installation and the sharp corners of the panel can damage tile and flooring surface.


Be sure to wear safety glasses whenever drilling or cutting. When drilling holes in ceramic tile or marble use a center punch and hammer to carefully break the glazed surface. This will prevent skidding when drilling.

NOTE: TEMPERED GLASS CANNOT BE DRILLED, CUT OR MODIFIED.

1

PREPARING INSTALLATION OF WALL POSTS

- In this step, you'll need following parts: [3] x2, [24] x6, [25] x6, [26] x6, [27] x6
- In this step, you'll need the following tools: B, C, D, G, I, J

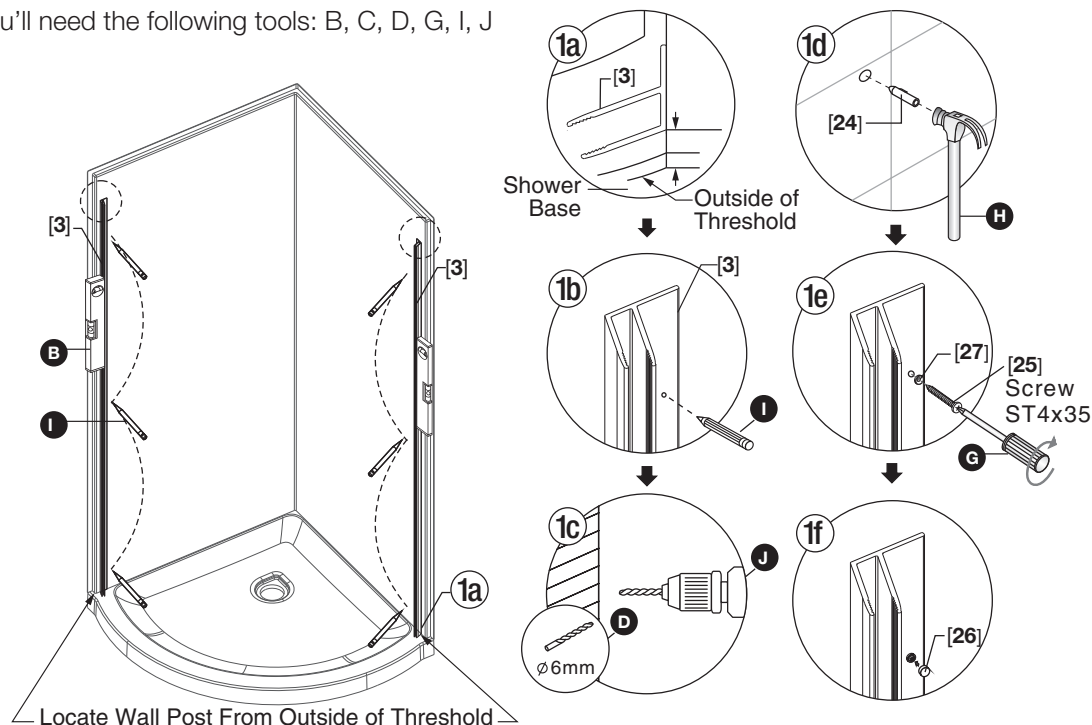


- Locate Wall Post From Outside of Threshold —
- 1a.** From outside edge of shower base threshold, measure 1-3/16" (30.2mm) and mark deck of base with Pencil [I]. Place Wall Post [3] onto mark on deck of base and plumb. Tape Wall Post [3] to wall to temporarily hold wall post in place.
 - 1b.** Mark each predrilled hole in Wall Post [3] with a pencil and remove Wall Post [3]. Repeat on opposite side.
 - 1c.** If using supplied Wall Anchors [24] drill each of the marks on the wall from step 1b using a 6mm drill bit. If not using Wall Anchors, drill using appropriate size bit for screw being used.
 - 1d.** If using Wall Anchors [24], place into each drilled hole.
 - 1e.** Place either Left or Right Wall Post [3] on the wall, and place a Back Screw Cap [27] over each ST4x35 screw [25] and screw Wall Post [3] into place.
 - 1f.** Cover each ST4x35 screw head [25] using Screw Caps [26].

American Standard

INSTALLING FIXED PANELS

- In this step, you'll need following parts: [1] x1, [4] x2, [9] x1, [11] x1, [14] x4, [17] x1, [28] x1
- In this step, you'll need the following tool: B

NOTE: TWO PEOPLE REQUIRED

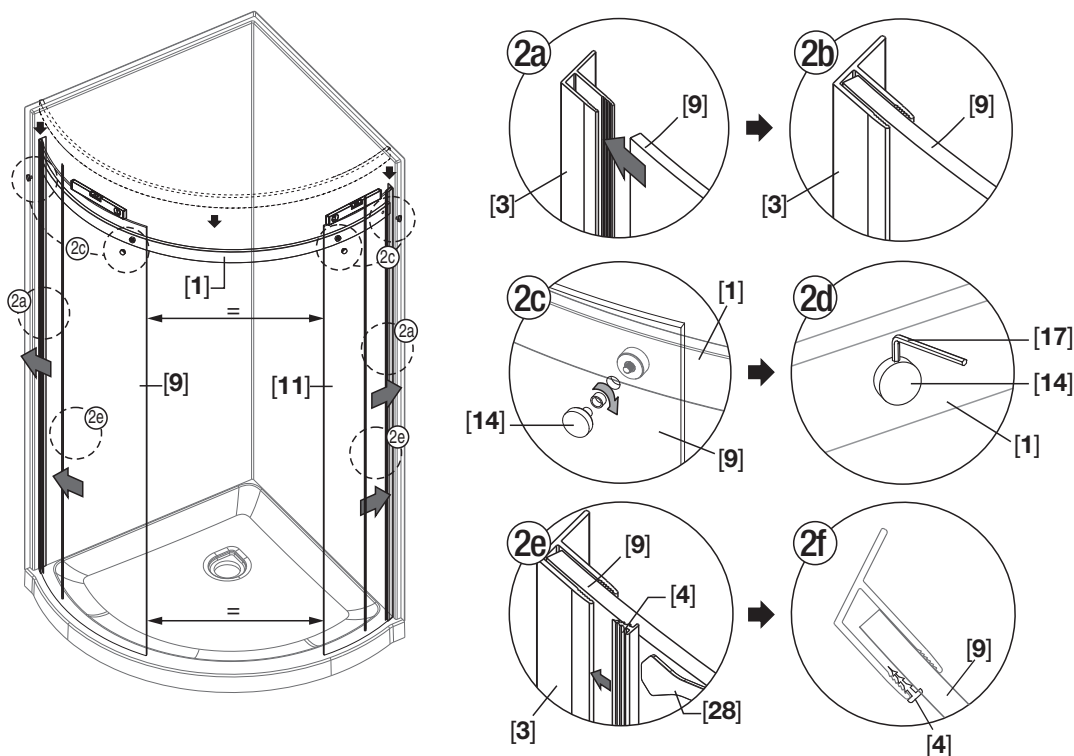

NOTE: Fixed Panel A [9] **MUST** be installed on left side only. See above illustration for reference.

2a. Insert Fixed Panel A [9] into Wall Post [3].

2b. Ensure Fixed Panel A [9] fits fully into the Wall Post [3] as illustrated. Then install Fixed Panel B [11] on the right (opposite) side in the same manner.

2c. Place Top Rail [1] from inside of shower area and align holes in Top Rail [1] with holes in Fixed Panel A [9] on left side. Attach Top Rail [1] to Fixed Panel A [9] using 2 Fasteners [14] and screw into the Top Rail [1].



2d. Tighten the 2 Fasteners [14] turning clockwise using supplied 2mm Allen Key [17] placed into a hole in Fastener. Ensure the clear plastic spacer of the Fastener [14] stays in the hole of the Fixed Panel. Do not overtighten Fasteners [14] or damage to the glass Fixed Panels may occur. Repeat on the opposite side for Fixed Panel B [11].

2e. Place Inserted Gaskets [4] from outside of shower area, between Wall Post [3] and Fixed Panel A [9] using supplied Installation Aid [28] while checking level on top of panel.

2f. Fully press Inserted Gasket [4] into Wall Post [3] between Fixed Panel A [9] and Wall Post [3] as illustrated. Repeat on opposite side. **NOTE:** Closely check the gasket and ensure it is fully inserted as the gasket aids in securing the glass panel to the wall post and provides a water tight seal.

INSTALLING BOTTOM GUIDE/CAP & BOTTOM THRESHOLD


- In this step, you'll need following part: [2] x1, [19] x1, [21] x1,
- In this step, you'll need the following tools: A, B, C, G, I

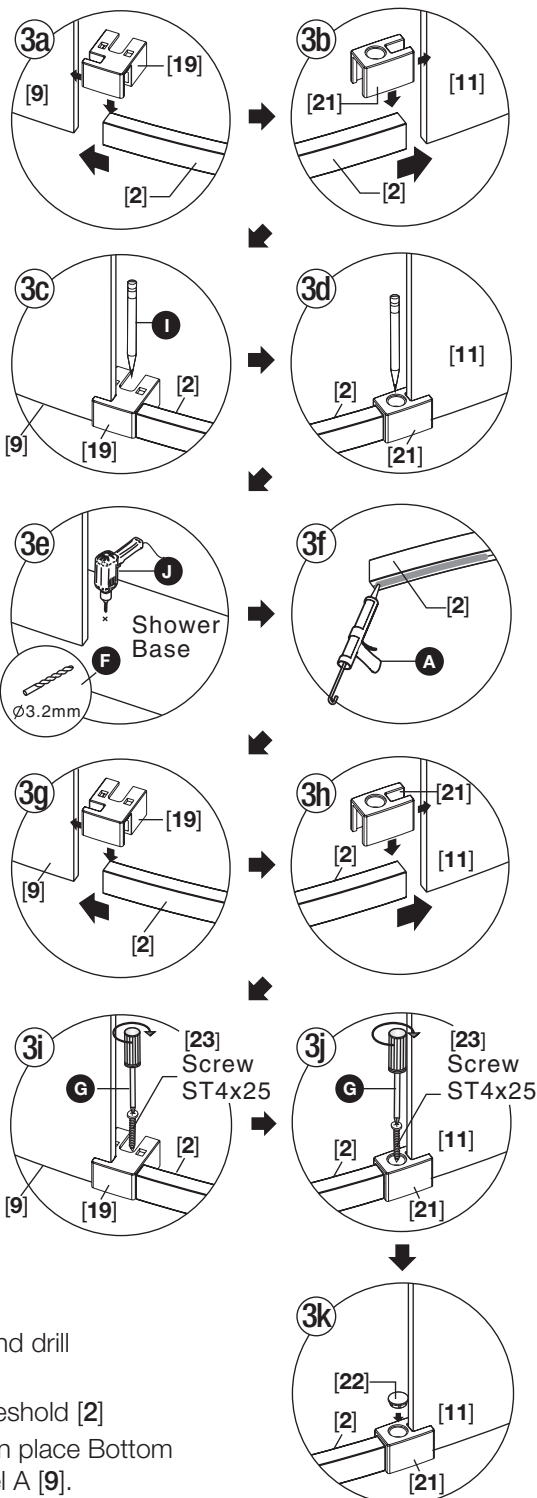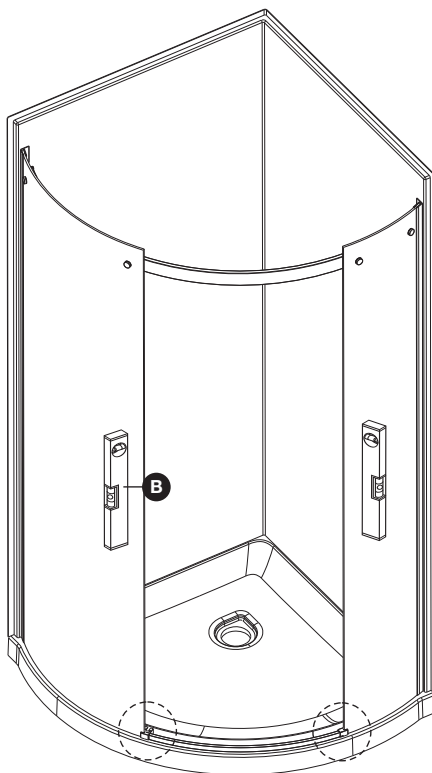

- 3a.** Place slot in Bottom Guide A-L [19] over Bottom Threshold [2] and Fixed Panel A [9].
- 3b.** Place End Cap [21] over Bottom Threshold [2] and Fixed Panel B [11]. **NOTE:** Evenly space Bottom Threshold [2] between Bottom Guide A-L [19] and End Cap [21] so no spaces exist between the two.
- 3c.** Check that both Fixed Panel A [9] and Fixed Panel B [11] are plumb using a Level. Mark the surface of the shower base deck using a pencil at the center slot of Bottom Guide A-L [19].
- 3d.** Mark the surface of the shower base deck using a Pencil at the center hole of End Cap [21].
- 3e.** Remove both Bottom Guide A-L [19] and End Cap [21] and drill at both marked locations using a 3.2 mm (1/8") Drill Bit.
- 3f.** Apply a silicon sealant to the underside of the Bottom Threshold [2]
- 3g.** Place Bottom Threshold [2] on deck of Shower Base, then place Bottom Guide A-L [19] over Bottom Threshold [2] and Fixed Panel A [9].
- 3h.** Place End Cap [21] over Bottom Threshold [2] and Fixed Panel B [11].
- 3i.** Screw Bottom Guide A-L [19] into place using supplied ST4x25 Screw [23].
- 3j.** Screw End Cap [23] into place using supplied ST4x25 Screw [23].
- 3k.** Snap Screw Cap [22] over screw hole of End Cap [23].

INSTALLING EXTERNAL/INTERNAL WHEELS & DOOR PANEL-L

- In this step, you'll need following parts: [10] x1, [13] x2, [15] x2, [17] x1, [20] x1, [29] x1

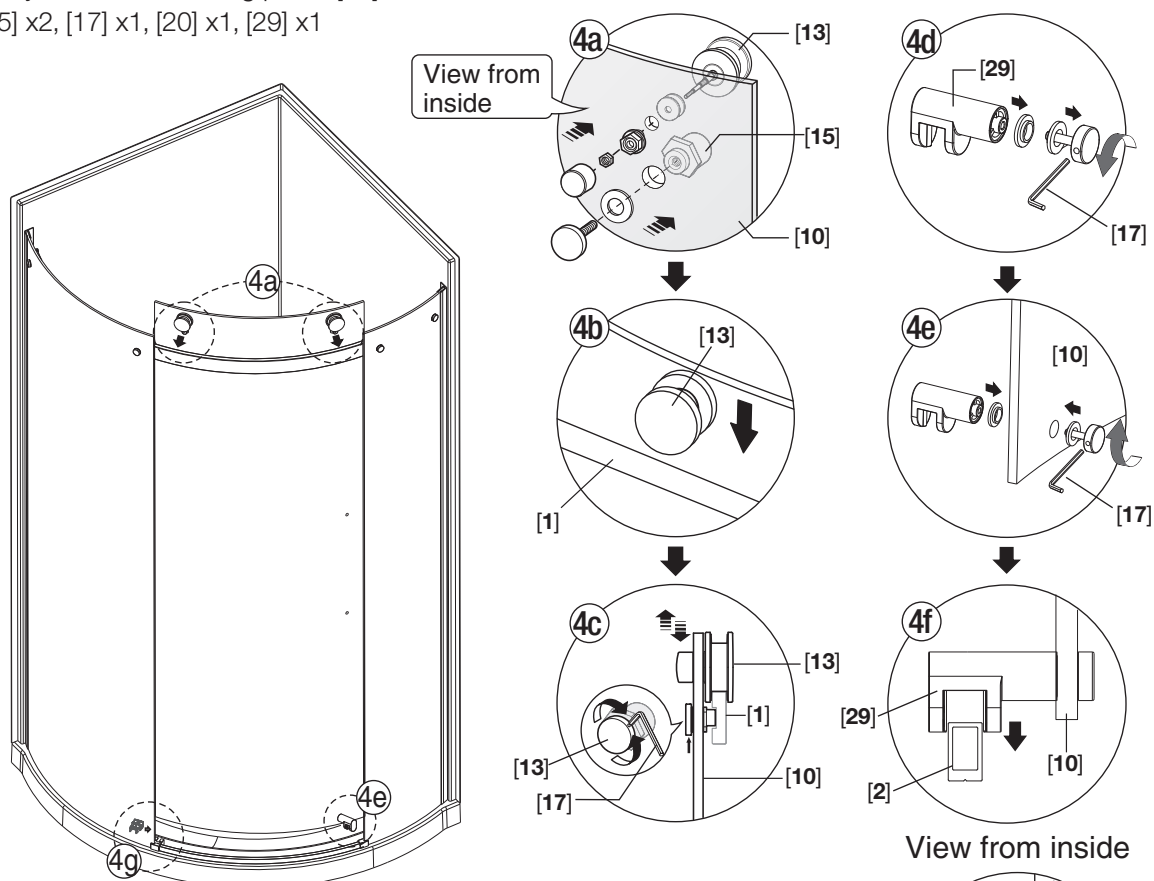

4a. Unscrew and separate 2 Exterior Wheels [13] and 2 Interior Adjust Wheels [15] as illustrated. Install one Exterior Wheel [13] into upper hole of Door Panel-L [10] as illustrated and fully tighten. Install one Interior Adjust Wheel [15] in the lower hole of Door Panel-L [10] as illustrated and lightly tighten. Install the second set of Exterior Wheel [13] and Interior Adjust Wheel [15] on the opposite side of Door Panel-L [10] and tighten.

4b. Lift assembled Door Panel-L [10] into shower area and place both Exterior Wheels [13] onto Top Rail [1] while inserting the Interior Adjust Wheels [15] into a notch in the Top Rail [1] which accepts the Interior Adjust Wheels [15] and slide Door Panel-L into place.

4c. Adjust both left and right Interior Adjust Wheels [15] using supplied 2mm Allen Key [17] to secure Door Panel-L [10] in place onto Top Rail [1].

4d. Unscrew Glass Stabilizer [29] turning counterclockwise and separate the Glass Stabilizer [29] as illustrated using supplied 2mm Allen Key [17].

4e. Insert one section of Glass Stabilizer [29] into outside hole of Door Panel-L [10] as illustrated while inserting opposite section of the Glass Stabilizer [29] from inside of Door Panel-L [10]. Screw clockwise to secure Glass Stabilizer [29] to Door Panel-L [10] while aligning the groove side of the Glass Stabilizer [29] to rest over the Bottom Threshold [02].

4f. The Glass Stabilizer [29] should be lowered over the Bottom Threshold [2] as illustrated. Ensure the Glass Stabilizer [29] stays in place on the Bottom Threshold [29] as the door is opened and closed.

4g. Slide slot of Bottom Guide B [20] onto Door Panel-L [10] as illustrated.



4h. Snap Bottom Guide B [20] into Bottom Guide A-L [19] as illustrated.

View from inside

View from inside

INSTALLING SIDE GASKET/MAGNETIC SEAL AND HANDLE SET

- In this step, you'll need following parts: [5] x1, [6] x1, [7] x1, [8] x1, [12] x1, [18] x1

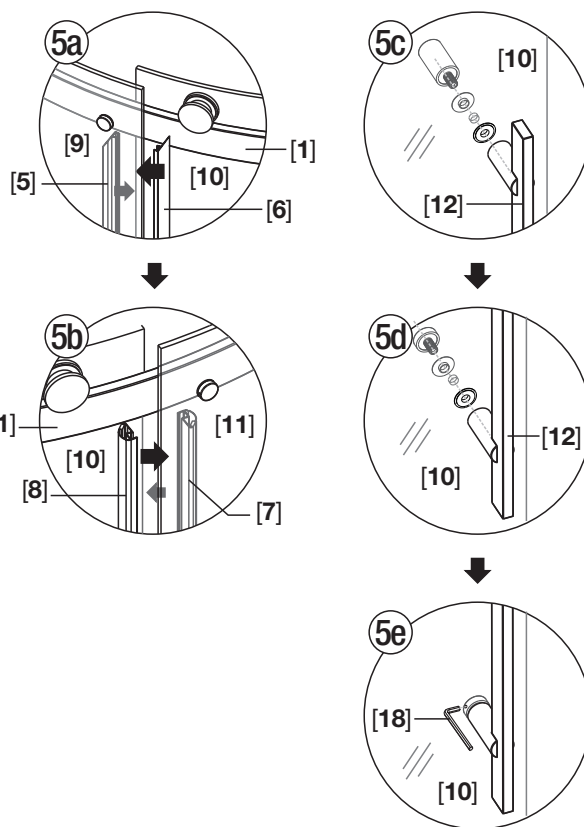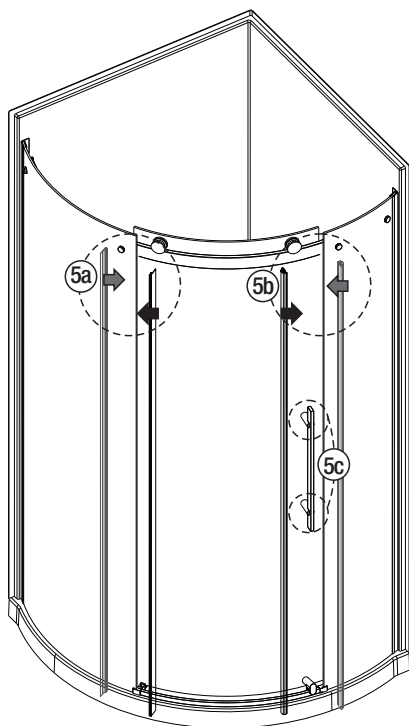


- 5a.** Install Longer Side Gasket [5] onto left edge of Door Panel-L [10]. Install Shorter Side Gasket [6] onto right edge of Fixed Panel A [9].
- 5b.** Install Longer Magnetic Seal [7] onto right edge of Door Panel-L [10]. Install Shorter Magnetic Seal [8] onto left edge of Fixed Panel B [11].
- 5c.** Unscrew upper portion of Handle Set [12 Longer End] and install into upper hole of Door Panel-L [10].
- 5d.** Unscrew lower portion of Handle Set [12 Shorter End] and install into lower hole of Door Panel-L [10].
- 5e.** Tighten both upper and lower portions of Handle Set [12] using supplied 2.5 mm Allen Key [18] to secure Handle Set [12] to Door Panel-L [10].

6

ADJUSTING DOOR PANEL-L

- In this step, you'll need following part: [15] x1

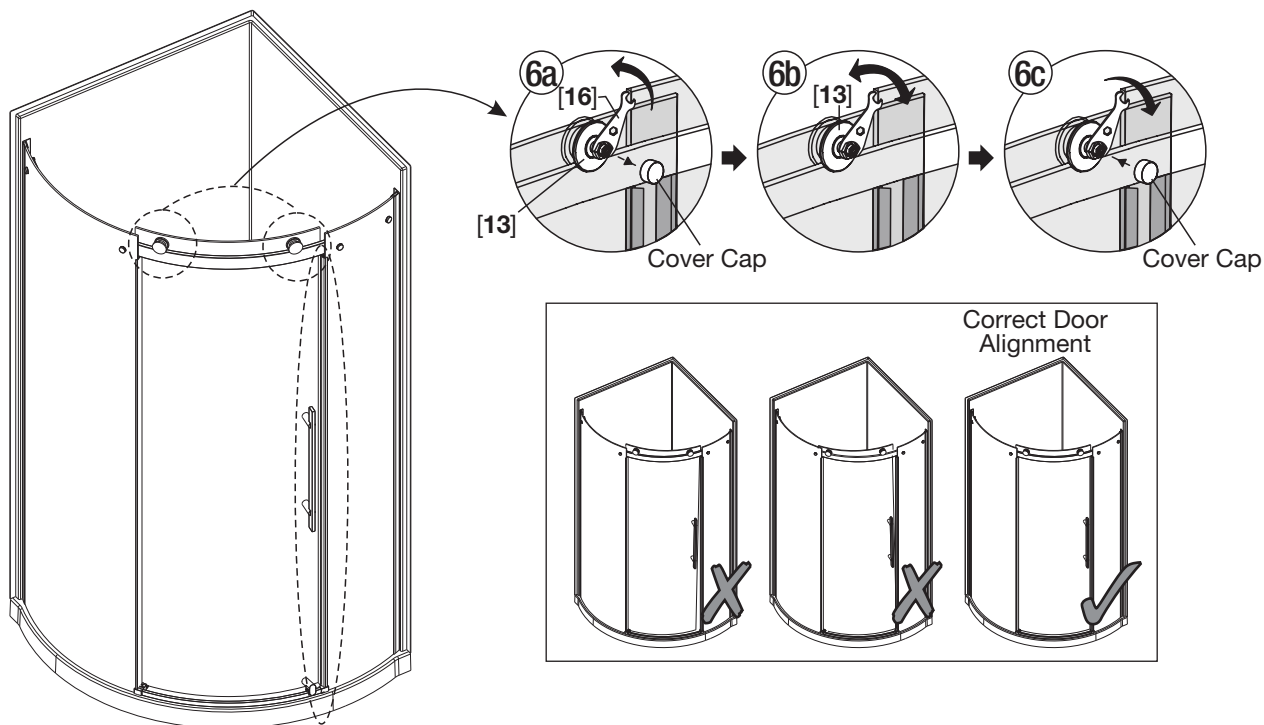

- 6a.** Slide Door Panel-L [10] closed and observe if the door securely seals against both Magnetic Seals [8] & [7] equally. If a gap exists at either end of Door Panel-L [10] it will be necessary to adjust the Exterior Wheels [13] to correctly fit the Door Panel to the Magnetic Seals. Remove the cover cap from the Exterior Wheel [13] to expose the door adjustment nut. Using the supplied Wrench [16], turn the hex nut on the Exterior Wheel left or right to move the door up or down on that side.
- 6b.** Remove the cover cap on the opposite Exterior Wheel [13] and use the supplied Wrench [16] to adjust the door up or down if adjustment is required on that side.
- 6c.** Close Door Panel-L [10] and ensure it seals against both Magnetic Seals [7] & [8] evenly. Place cover caps back on Exterior Wheels.


7

APPLYING SILICONE SEALANT

- In this step, you'll need the following tool: A
- 7a.** Apply silicone at all outside locations as shown.
Allow 24 hours for silicone to dry before use.



Allow 24 hours for silicone to dry before use.

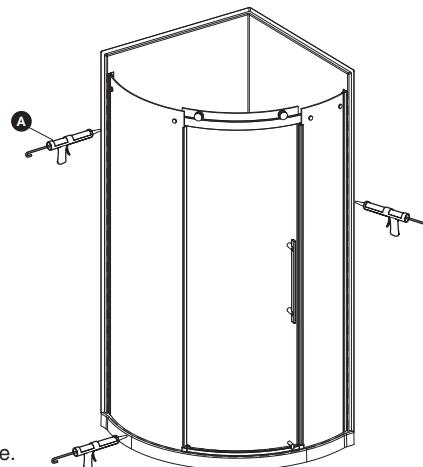

POST INSTALLATION CLEAN-UP

Remove all construction debris from bath. Tile grout can be removed with a wooden popsicle stick or tongue depressor.

Do not use wire brushes or any other metal implement on bath surface. Post installation clean-up generally can be completed using warm water and liquid dishwashing detergent. Stubborn dirt or stains may be removed using granular Spic and Span® mixed with water.

Painter's naphtha can be used to remove excess adhesives and/or wet oil-base paint.

AFTERCARE AND CLEANING

Two primary materials are used to manufacture your new American Standard shower enclosure: tempered glass and anodized aluminum. To ensure a long lasting finish on the enclosure, wipe it down with a towel after each use.

For occasional, more concentrated cleaning efforts Lysol Non-Abrasive Bathroom Cleaner works extremely well. Be sure that any over spray falling on the aluminum frame is rinsed thoroughly and dried. Many over-the-counter cleaners, if applied to the aluminum and left on, will harm the metal finish and cause permanent damage even though their directions indicate safe use on shower doors. Never use a scouring agent to clean the aluminum.

Spic And Span® Is A Registered Trademark Of The Spic And Span Company

American Standard

WARRANTY

SHOWER DOORS 10 YEAR WARRANTY

AS America, Inc. ("American Standard®") warrants to the original non-commercial owner that it will, at its sole option, repair or replace this product or any part of this product, if it confirms that the product is defective in materials or workmanship under normal use and maintenance for 10 years. This warranty is non-transferable to subsequent purchasers or owners. The sole exception to the non-transferability of this warranty is that if this product is purchased by a plumber, contractor or other service provider, this warranty extends to the first property owner on whose behalf the product was purchased for installation.

For this warranty to become effective, the warranty registration process must be completed via the internet or telephone per the warranty registration instructions.

The warranty term for non-commercial owners does not apply to commercial owner installations. Commercial owner installations shall have a warranty of 3 year(s), measured from the date of initial purchase. A "commercial owner installation" includes use of the products in apartments and other rental units, non-residential facilities, hotels, commercial businesses and/or other public accommodations. Except for warranty duration, all other warranty terms apply to commercial owner installations.

This warranty DOES NOT COVER the following:

1. Because American Standard cannot control the quality of products sold by unauthorized sellers, this warranty applies only to American Standard products which were purchased from American Standard or an American Standard authorized seller, unless otherwise prohibited by law. American Standard reserves the right to reject warranty claims from purchasers for products purchased from unauthorized sellers, including unauthorized Internet sites.
2. Defects or damage arising from shipping, installation, alterations, accidents, abuse, misuse, lack of proper maintenance and use of other than genuine American Standard replacement parts, in all cases whether caused by a plumbing contractor, service company, the owner or any other person.
3. Deterioration through normal wear and tear.
4. WATER DAMAGE, OR DAMAGES RESULTING FROM ABUSE OR MISUSE OR FROM FAILURE TO INSTALL OR MAINTAIN THIS PLUMBING PRODUCT IN ACCORDANCE WITH THE WRITTEN INSTRUCTIONS FURNISHED BY AS AMERICA, INC.
5. USE OF CLEANING PRODUCTS CONTAINING CALCIUM HYPO CHLORITE (CHLORINE), SCOURING POWDERS OR PADS SHALL NOT BE COVERED.
6. THE USE OF SCENTED CANDLES IN CLOSE PROXIMITY WITH THIS PRODUCT CAN RESULT IN PERMANENT STAINING OF THE FINISH.
7. Expense of normal maintenance.
8. All costs of removal, transportation, labor, reinstallation or other costs including postage and/or shipping costs to obtain warranty service shall be paid by the purchaser.
9. ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, ALL OF WHICH ARE HEREBY EXPRESSLY DISCLAIMED. Some States do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY OR FITNESS FOR PURPOSE INTENDED, ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some States do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.
10. Responsibility for compliance with local code requirements ARE EXCLUDED FROM THIS WARRANTY. (Since local code requirements vary greatly distributors, retailers, dealers, installation contractors and users of plumbing products should determine whether there are any code restrictions on the installation or use of a specific product.) This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

OBTAINING WARRANTY SERVICE

If you believe that you have a warranty claim, contact American Standard, either through an authorized AS America, Inc. dealer or re-seller, by writing to the addresses below, or visiting the website below:

UNITED STATES

American Standard Brands
30 Knightsbridge Road, Suite 301
Piscataway, New Jersey 08854
Attention: Director of Customer Care
For residents of the United States,
warranty information may also be obtained
by calling the following toll free number:
(800) 442-1902
www.americanstandard.com

CANADA

LIXIL Canada, Inc.
5900 Avebury Rd.
Mississauga, Ontario
Canada L5R 3M3
Toll Free: (800) 387-0369
www.americanstandard.ca

MEXICO

American Standard B&K Mexico
S. de R.L. de C.V.
Via Morelos #330
Col. Santa Clara
Ecatepec 55540 Edo. Mexico
Toll Free: 01-800-839-1200
www.americanstandard.com.mx

PLEASE COMPLETE AMERICAN STANDARD WARRANTY REGISTRATION PROCESS AND SAVE THIS WARRANTY INFORMATION

IMPORTANT: Registration of the shower doors must be completed for this warranty to become effective. Your registration will make it easier to contact you in the event of a product recall.*

INSTRUCTIONS: Register your shower doors at www.americanstandard.com. Please save your proof of purchase (sale receipt). If you need assistance or do not have access to our website, please contact American Standard Customer Care at: (800) 442-1902. An American Standard representative will assist in completing the warranty registration.

*In California, your warranty rights remain intact even if you do not complete the registration process.

THIS WARRANTY IS NOT TRANSFERABLE FROM ORIGINAL CONSUMER PURCHASER.

American Standard

TELL US WHAT YOU THINK!



Please leave us a product review or story at **americanstandard.com/reviews**



Great Tub

03/13/2018 06:52:29 CDT American Standard Bathtubs Saver 60 Inch by 34 Inch Integral Apron Bathtub, Left Hand Drain

Love the tub. It is very roomy and would definitely buy it again. Our old tub cracked so we got this one to replace it. This one feels like it is more durable and not as flimsy as the last one.

Register your warranty and sign up for an idea-filled newsletter at **americanstandard.com/warranty**.

Find installation videos at **youtube.com/americanstandard**.

≡ WANT MORE INFO?

For questions or help call us at **800-442-1902**,
or visit **americanstandard.com**