


Installation Instructions

HERITAGE
AMARILIS

**5400 SERIES
7400 SERIES
7490 SERIES**

HERITAGE SERIES 4" CENTERSET LAVATORY AND BAR SINK FAUCETS

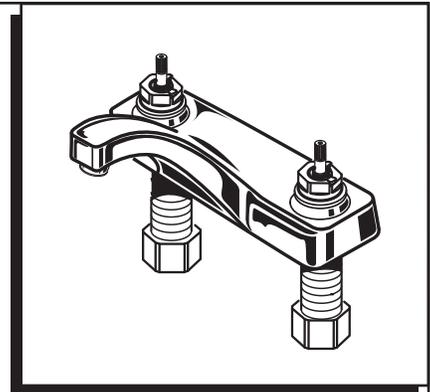





Certified to comply with ANSI A112.18.1M
U.S. PATENT NOS. 5,819,789; 4,294,289

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

34063M-B Rev. 1.4 (4/16)


5400 SERIES
CENTERSET
W/POP-UP

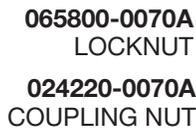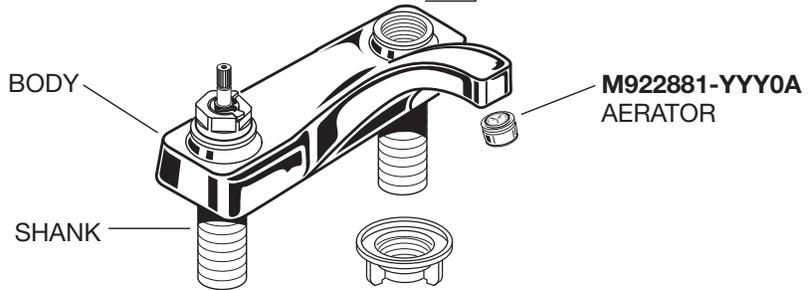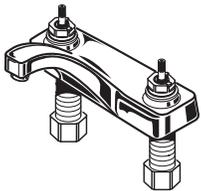

Replace the "YYY" with appropriate finish code

CHROME	002
--------	-----



7400 SERIES
CENTERSET WITH
GOOSENECK SPOUT

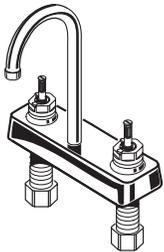

7401 SERIES
GOOSENECK
BODY

060281-YYY0A
GOOSENECK SPOUT

7490 SERIES
BAR SINK WITH
SWING SPOUT

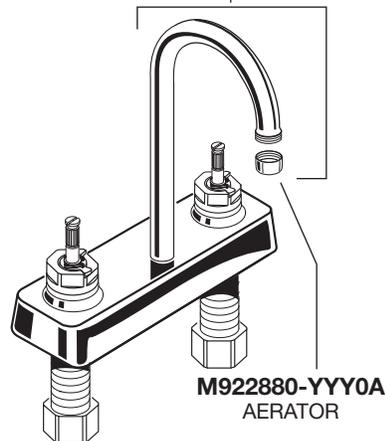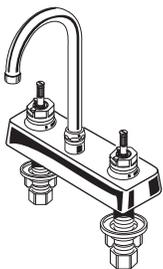


1

CAUTION

Turn off water at main supply.

- Apply a bead of PUTTY along the edge of the underside of the BODY and insert faucet SHANKS through holes of SINK.
- Assemble LOCKNUTS from underside of SINK. Align BODY as far forward as possible and secure position by tightening LOCKNUTS. (Plastic LOCKNUTS on model 7490 are tightened by hand.)
- Connect the HOT water supply to the left SHANK and the COLD water supply to the right SHANK using sealant, appropriate connectors, and COUPLING NUTS.
- Refer to separate "Instruction Sheet" for assembly of handles.

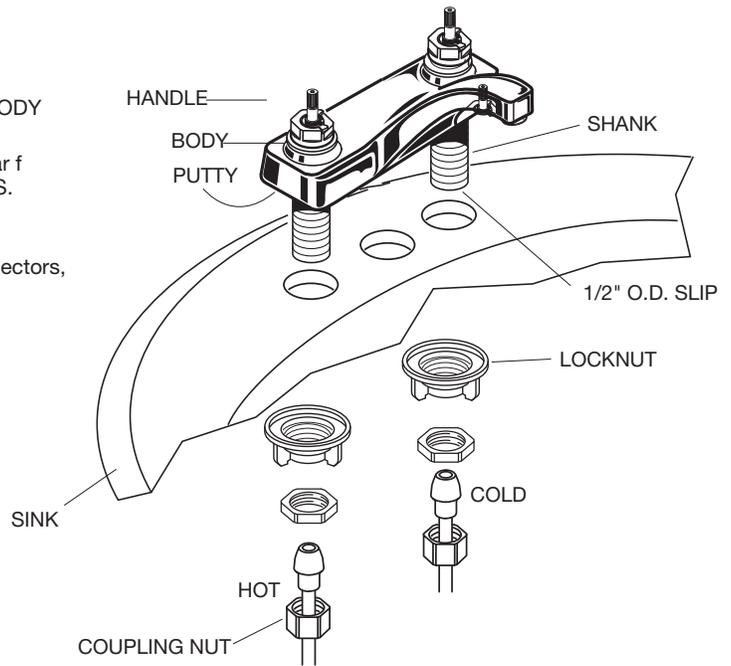

2



TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Turn handles into OFF position and replace AERATOR.

3

SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Remove SPRING CLIP.
 - Lift STOP WASHER, turn 90° and replace.
 - Replace SPRING CLIP.
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.
- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Unscrew CARTRIDGE with wrench.
 - Thoroughly rinse plastic SCREEN a base of CARTRIDGE.
 - Replace CARTRIDGE until flange is tight against valve body.
 - Turn valves OFF.
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.

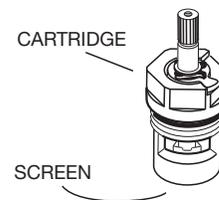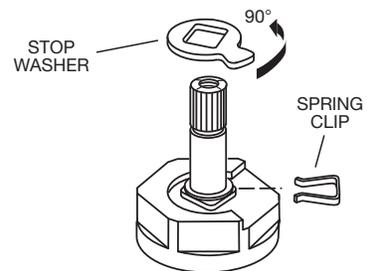

HOT LINE FOR HELP

For toll-free information and answers to your questions, call:
1 (800) 442-1902
Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST
Saturday 10:00 a.m. to 4:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST
IN MEXICO 01-800-839-1200



Product names listed herein are trademarks of AS America, Inc. ©2016

PART OF LIXIL