

American Standard

Seva™


BATH AND SHOWER TRIM KITS

Thank you for selecting American Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Installation Instructions

**T480.508
T480.507**

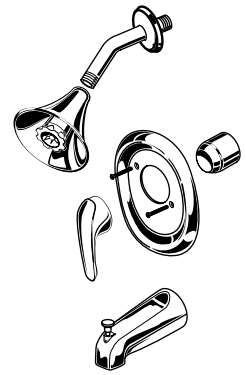

Certified to comply with ANSI A112.18.1
U.S. Patent No. D403,750

M968698 REV. 1.1


RECOMMENDED TOOLS




Phillips Screwdriver




Flat Blade Screwdriver



Plumbers' Putty or Caulking




Adjustable Wrench



Teflon Tape


ROUGHING-IN DIMENSIONS

■ FOR REFERENCE ONLY

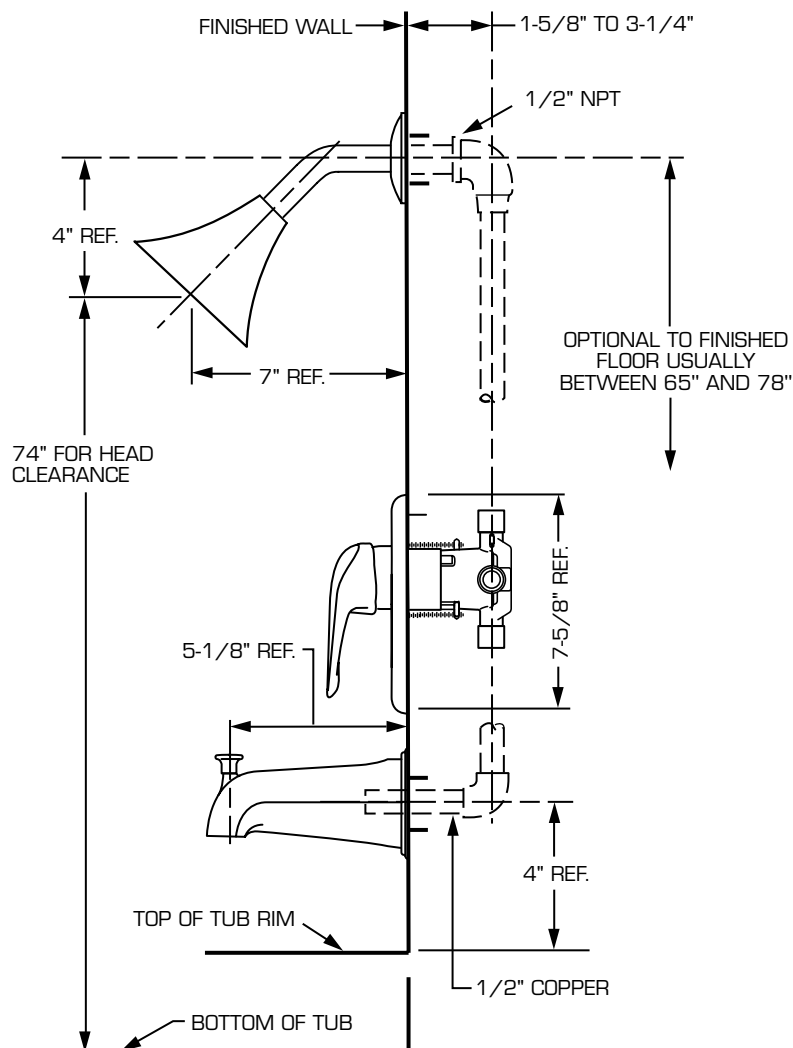

1 INSTALL TRIM


- Remove PLASTER GUARD (1).
- Push CAP (2) on valve, place ESCUTCHEON (3) and attach with SCREWS (4).
- Install HANDLE (5) by pushing it onto CARTRIDGE STEM (6) and tightening SET SCREW (7) from below.
- Install SHOWER ARM (8) with FLANGE (9). Install SHOWER HEAD (10). *See Step 2.*
- Check proper operation of HANDLE (5) and DIVERTER SPOUT (11).

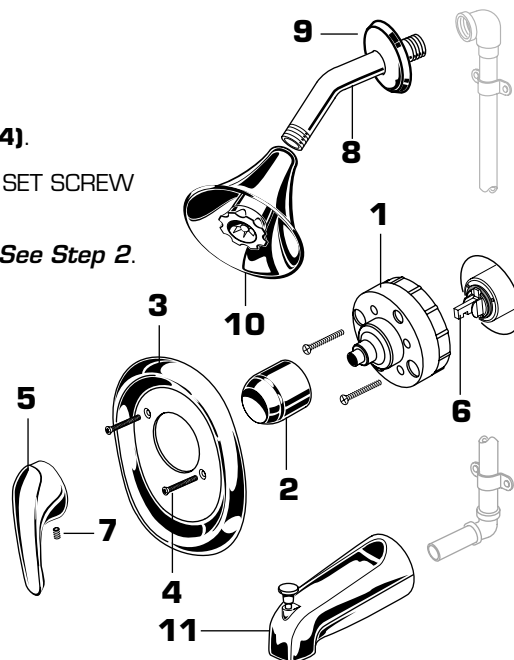

2 INSTALL SHOWER HEAD ASSEMBLY


REMOVE SHOWER HEAD FROM HOUSING

- Hold SHOWERHEAD (1) with one hand and HOUSING (2) with the other as illustrated.
- Rotate SHOWERHEAD (1) clockwise while holding HOUSING (2) stationary. **NOTE: The thread connection is a left hand thread.** Keep turning SHOWERHEAD (1) until it can be removed from the HOUSING (2).

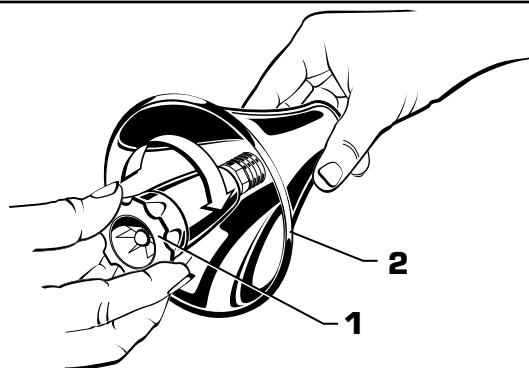


2a INSTALL HOUSING

- Slide HOUSING (2) onto SHOWER ARM (3).

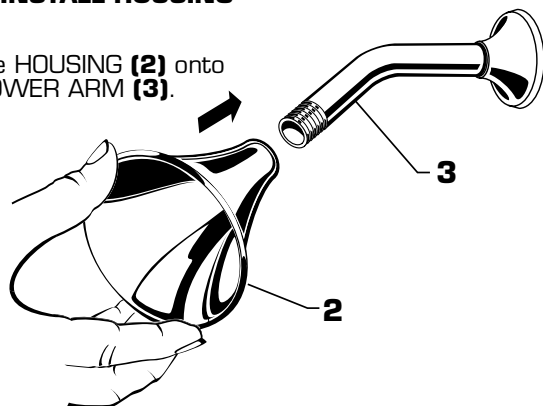


2b INSTALL SHOWER HEAD

- Rap SHOWER ARM (3) threads with Teflon tape.
- Tighten SHOWERHEAD (1) with an adjustable wrench. Do not over tighten.

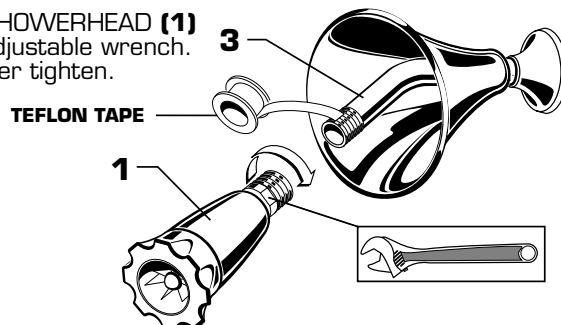

2c INSTALL HOUSING TO SHOWER HEAD

- Install HOUSING (2) onto SHOWER HEAD (1). Thread HOUSING (2) counter-clockwise to install onto SHOWER HEAD (1). Hand tighten only.

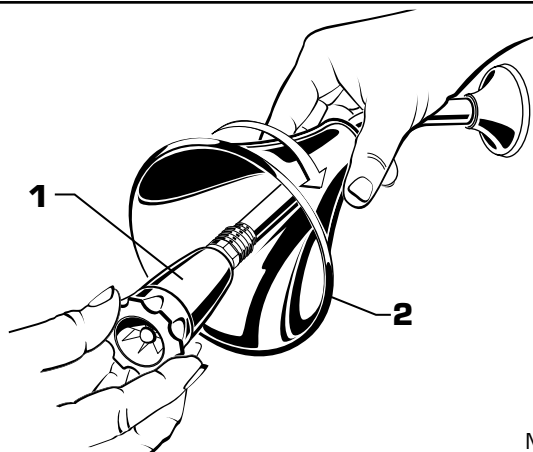


3

ADJUST HOT LIMIT STOP

HOT LIMIT SAFETY STOP ADJUSTMENT

By restricting handle rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP reduces risk of accidental scalding. To set the maximum hot water temperature of your faucets, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP.


- Use a flat blade screwdriver or your fingers to pull up and rotate red HOT LIMIT SAFETY STOP **(1)**. Follow Step "A" or "B" to adjust min./max. discharge temperature. "0" being the hottest to "7" the coldest temperature setting. Factory set at "0".

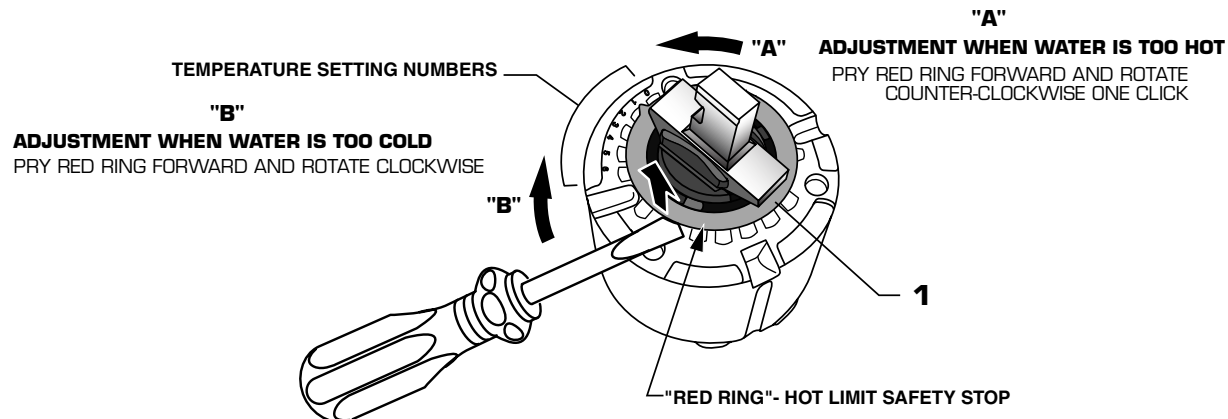

4

SERVICE

- If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.
- Clogged CARTRIDGE **(4)** inlets may cause reduced flow in "full on" hot or cold. To clean inlets, first turn off water supply, then:
 - Remove HANDLE **(1)**, CAP **(2)** and CARTRIDGE **(4)**. Clean inlets and MANIFOLD **(5)**.
 - Reassemble CARTRIDGE **(4)**, alternately tightening SCREWS **(3)**.
 - Replace CAP **(2)** and HANDLE **(1)**. Check flow.

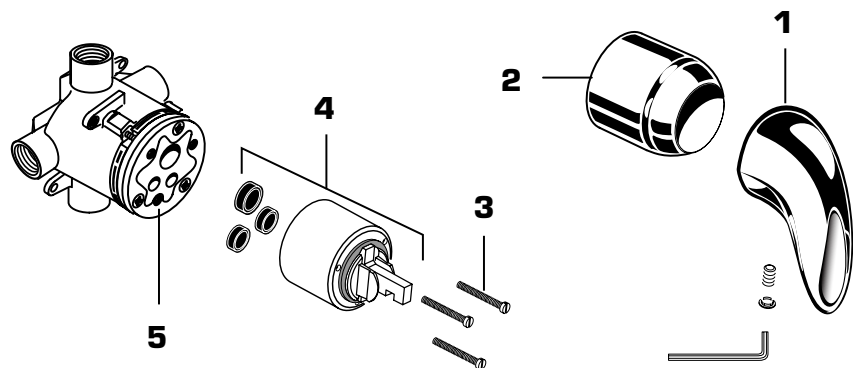

CARE:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.


023560-YYY0A
SHOWER ARM AND FLANGE

M953016-YYY0A
SHOWER HEAD

M961812-YYY0A
ESCUTCHEON AND SCREWS

078016-YYY0A
ESCUTCHEON SCREWS

060327-YYY0A
LEVER HANDLE KIT

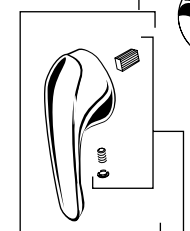

030126-0070A
HANDLE SCREW KIT



M907050-YYY0A
ESCUTCHEON CAP SET



022650-YYY0A
DIVERTER SPOUT (Slip-on)

Replace the "YYY" with
appropriate finish code

CHROME	002
CHROME/BRASS	299



HOT LINE FOR HELP

For toll-free information and answers to your questions, call:
1-800-442-1902
Weekdays 8:00 a.m. to 6:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST
IN MEXICO 01-800-639-12-00